




## MY DELTA SOLAR APP

Delta Electronics Australia - How to export limit your Inverter via the MyDeltaSolar APP

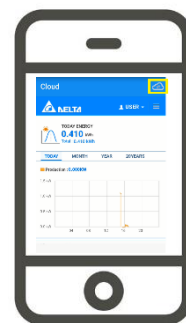

Author: Geordie Zaphiris  
Geordie.zaphiris@deltaww.com



## Contents

Document History .....	2
How to export limit your Inverter via the MyDeltaSolar App .....	3


## Document History

Revision	Note	Written	Checked	Date
<b>A1.0</b>		GZ		20/08/2019

APP	Inverter	DSP	COM	Date
<b>V1.29a</b>	H5A_222	2.00	2.04	12/06/2020

## How to export limit your Inverter via the MyDeltaSolar App

1. This can only be done via the APP, go to the IOS or Google Play store and download the “My Delta Solar” App.

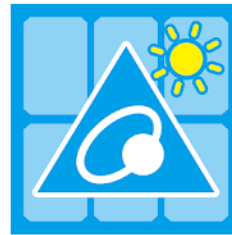

MyDeltaSolar

DELTA\_App.tn Tools

3+

2. Please turn off your mobile data and connect your phone to the home Wi-Fi internet connection.




Swipe from the top of the screen down



Swipe from the top of the screen down again



Tap on mobile data to turn it on/off. (symbol is black and white when off)  
Connect the phone to the home Wi-Fi

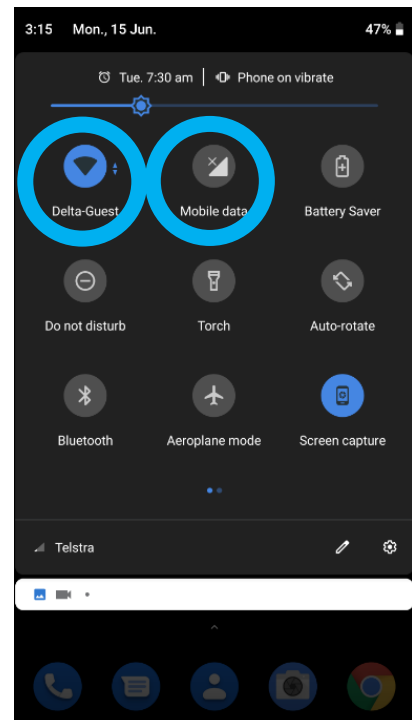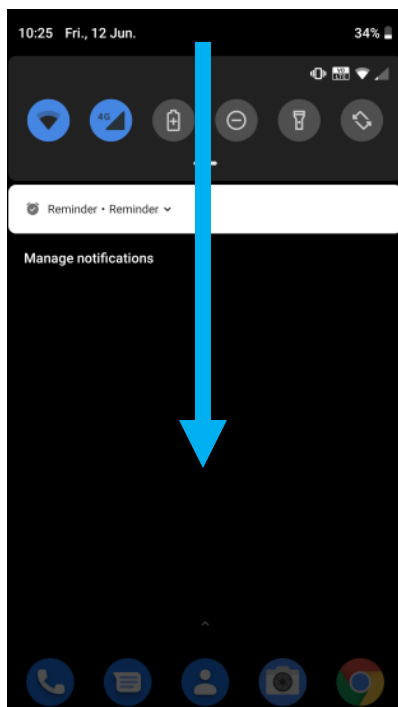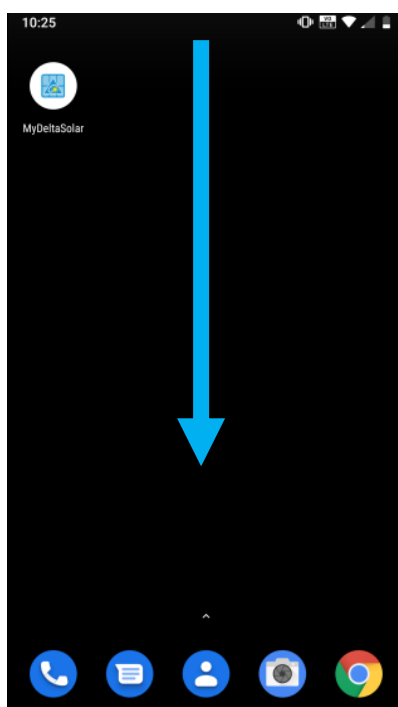



### 3. Launch the app and type in your details to Sign In.

3.1 Tap on the MyDeltaSolar APP




3.2 Fill in your email and password and Tap on "SIGN IN"

3.3 Tap the cloud button.




4. Press "OK" and your screen will swap to the Wi-Fi screen. Connect your mobile device to the Wi-Fi of the inverter using the password of the cloud account used to setup the device.

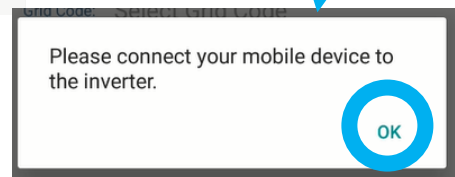

If not cloud connected yet the default password is: DELTASOL


Then return to the App (use the return button at the bottom of the phone on Android devices)

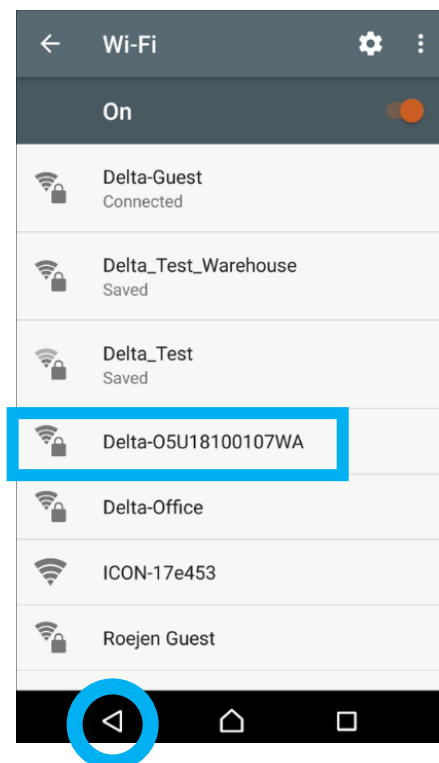


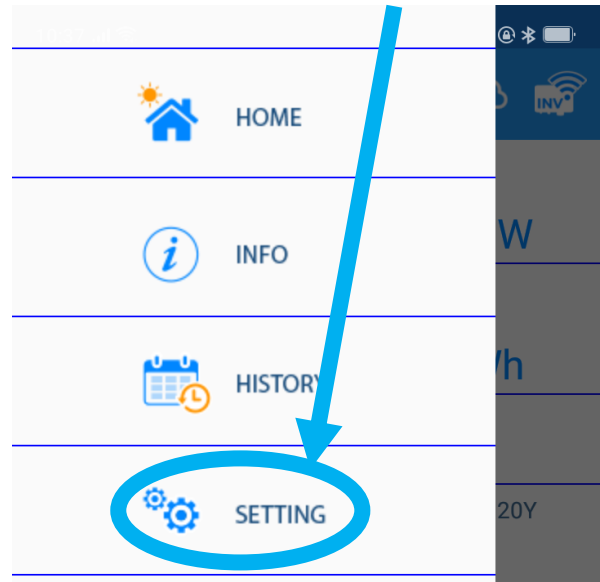


If the screen does not change to as below you may need to press the cloud button again.


5. Press the menu button 

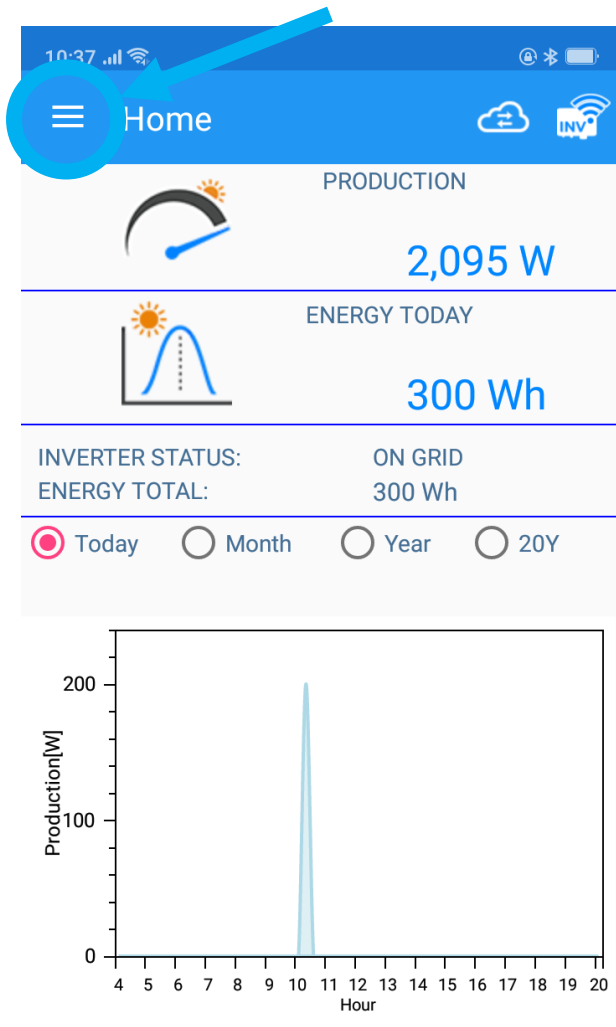




6. Press the Setting  button



7. Press the "Other" button

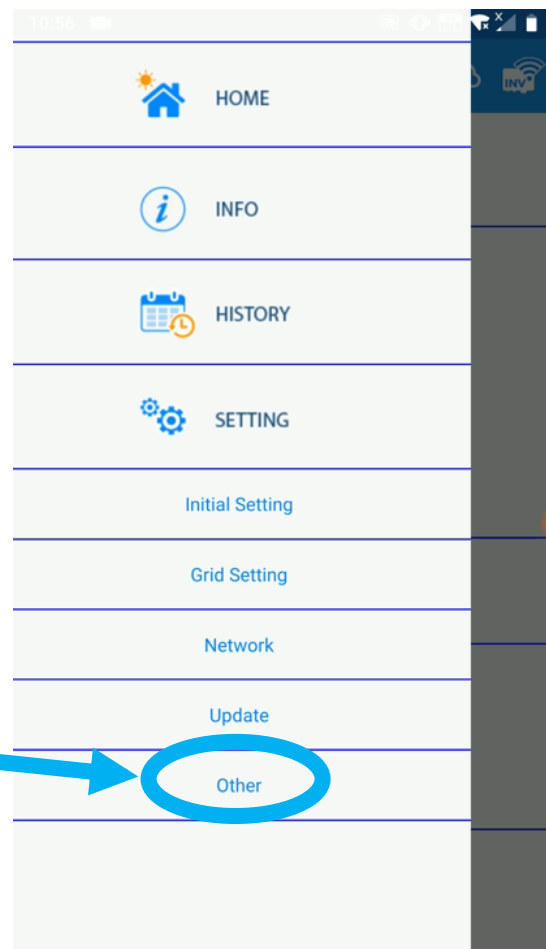

## 8. Password: 4613

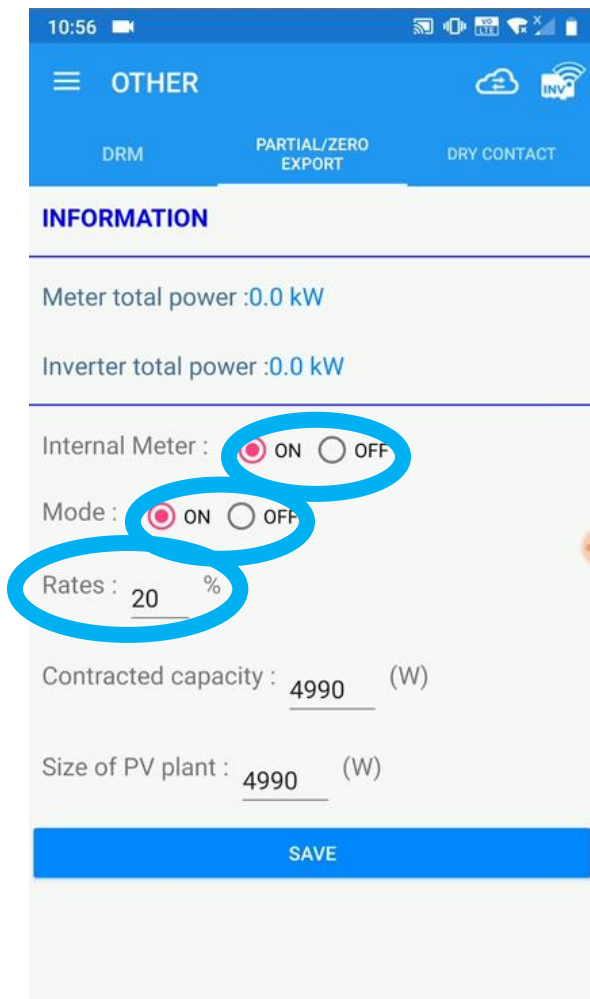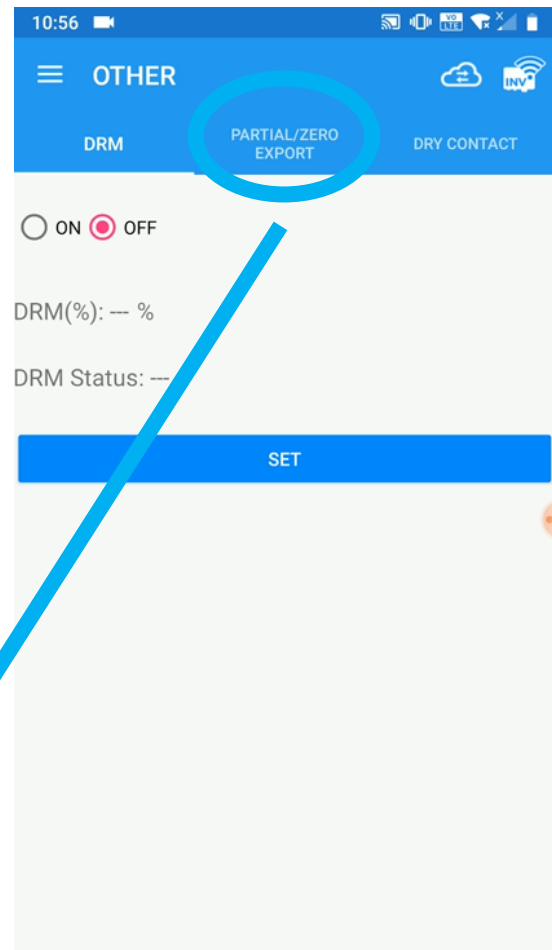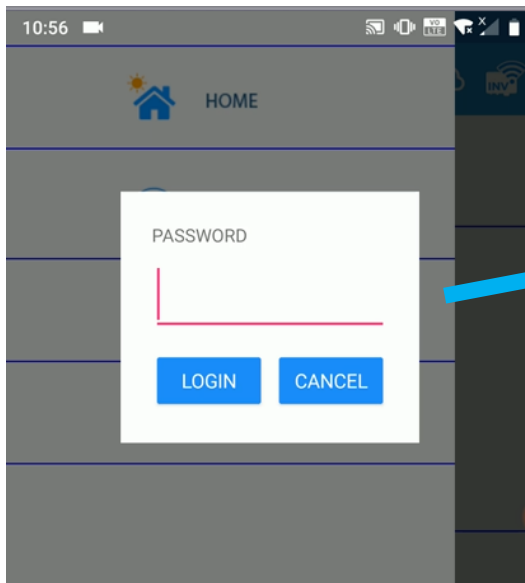

## 9. Turn "Internal Meter" On

Turn "Mode" On.

Rate is the amount of export as a %. The % is taken of the smaller of the two numbers below it.

Eg 20% of the smaller of the two numbers (both the same at 4990W) is now the export limit. i.e. ~1kW

Contracted capacity and size of PV plant can be made the same.