Isolation test failed

D007_V1.0






Pre-charge error

Check Item:

- 1. check the connectivity of relay control board connector is well.
- a. Open the front cover of the UUT.
- b. Release the fixed screw of the inside cover.

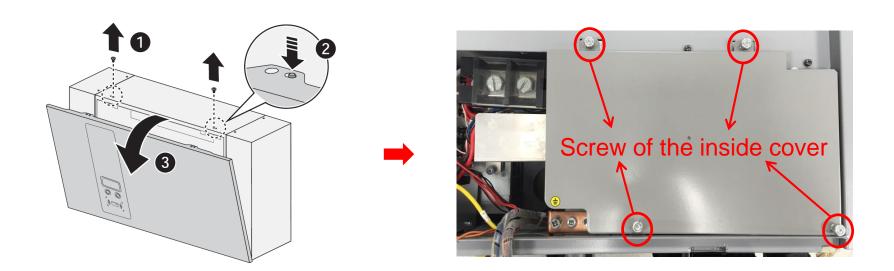



Pre-charge error

c. Please check two of the connector on relay control board, the location show as below:





Thank You!

