

MY DELTA SOLAR APP

Delta Electronics Australia - How to connect your Inverter to the MyDeltaSolar Cloud



ッ





Author: Geordie Zaphiris Geordie.zaphiris@deltaww.com



Contents

Document History	2
How to connect your Inverter to the MyDeltaSolar Cloud	3

Document History

Revision	Note	Written	Checked	Date
A1.1		GZ		20/08/2019
ΑΡΡ	Inverter	DSP	СОМ	Date
V1.29a	H5A_222	2.00	2.04	12/06/2020



How to connect your Inverter to the MyDeltaSolar Cloud


 Go to the IOS or Google Play store and download the "My Delta Solar" App.



MyDeltaSolar DELTA_App.tn Tools

turn it on/off. (symbol is

 Please turn off your mobile data and connect your phone to the home Wi-Fi internet connection closest to the inverter.
 Tap on mobile data to

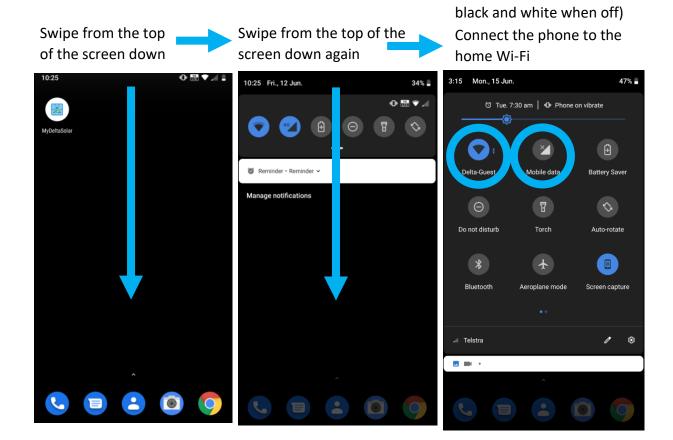




3. Launch the app and type in your details to Sign In.

Tap on the MyDeltaSolar APP	Fill in your e password a "SIGN IN"		Tap the glass but	magnifying tton.
0 🗟 🕈 🖌 🕯	Login	æ	Cloud	
MyDeltaSolar	Email:			
	Password:		Today ENERGY	
			TODAY MONTH	YEAR 20YEARS
	Forget password Create	account Language	Production : 0.000 KW 1.0 kW	
	Please select your device to c	ontinue:	0.5 kW	
	Inverter (Data Collector	-0.5 kW	
	SIGN	IN	-1.0 kW 04 08	12 16 20
^	V1.23.			
0 2 3 0 0				

4. Press "New Plant". This will be treated as a new installation at a site, multiple inverters can be added to this site. Fill in a plant name, select australia as country and press the "GET" button for location. Then press "SET".




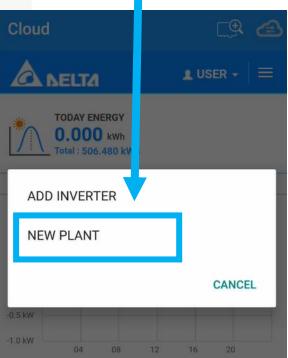

Page | 4 V3.2 (pre-existing account)




5. Press "OK" and your screen will swap to the Wi-Fi screen. Connect your mobile device to the Wi-Fi of the inverter using the default password: DELTASOL. Then return to the App (use the return button at the bottom of the phone on Android devices)

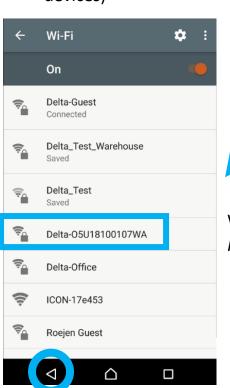

Button to return to App using Android phone

Init	Available Grid Co	des
ľ	Select Grid Code	
c	AU_WP	- 1
G	AU	- 1
	NZ	- 1
L	50_MG	- 1
L	AU_VIC	_
L	AU_PL_4p6K	- 1
L	AU_Energex	- 1
	AU_ERGON	- 1
	AU_SA	- 1
		CANCEL

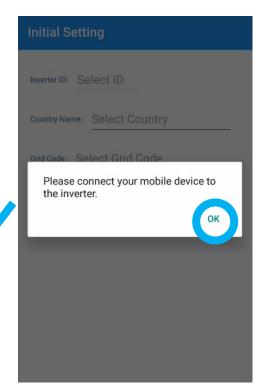

Wi-Fi name: DELTA-SN Password: DELTASOL

6. After pressing the back button, please select the appropriate grid code for your area and press "SET".

Initial Setting
Inverter ID: 1
Country Name: Australia & New Zealand
Grid Code: AU
SET



 Read the terms and conditions, scroll down and press the tickbox to agree. Press "OK" 		have chance to access to your account and get information of your inverter and related information if your password is not changed or strong enough. You agree to keep this password confidential. You agree that you are wholly responsible for maintaining the confidentiality of your password. If you believe for any reason that the security of your username or password has been compromised, you are urged to change the username or password immediately. Delta		
A NELTA		Electronic Inc. shall under no circum be liable for any misuse, unauthorize loss of your password.		
CHANGE INVERTER WI-FI PASSWORD		By selecting the checkbox below, yo ate that you understand the limitatic information it contains, that you agr terms and conditions stated above,	ons of the ree to the	
Same as cloud		you waive any and all claims of any nature against Delta Electronics Inc.	kind and ., its of-	
Change to other		ficers, employees, affiliates or licens respect to your use of this site or the ation provided.By not selecting the c you will not be permitted to access t services offered by Delta electronics	e inform- checkbox, the online	
New Password: Ry******		services offered by Deta electronics	, mc	
		I had read and agree this decla	ration	
Confirm Password :		ОК		
Your password must have :				
8 - 16 characters.	8. Press	s "Set" to change tl	he inverter	
		to your cloud accou		
Reset Set	-	(Inverter Wi-Fi pas		
	longer DEL			
	HANGE INVERTER WH			
C Y B		ок		
	Reset S	et		

no



			🔿 📷	
Press the "Scan" button and wait for the scan to complete.		A NELTA		
= NETWORK 🗈 📷		CONNECT TO INTERNET		
CONNECT TO INTERNET 100% Specific SSID Scan		Specific SSID Scan		
Delta-Office -37dbm WPA2 Enterprise	1			
Delta-Guest -37dbm WPA2	10. Sel	ect the Wi-Fi signal to inverter to.	o connect your	
 Delta_Test_Warehouse -51dbm WPA2 Delta_Test -71dbm WPA2 Chromecast1796.b -76dbm Open 	(-60dbm is a good signal and -70dbm is a weak signal, make sure you are connecting to a good signal)			
Password Connect	U	ure no suitable Wi-Fi c	onnections,	


consider moving the router closer or using a Wi-Fi extender. Inverter information such as production can be viewed in point to point mode without internet.

If the Wi-Fi strength is too weak (weaker than ~-70dbm) the App will still attempt connection, the outcome will be displayed in a message popup box.

Select the Wi-Fi Connection and type in the Wi-Fi password then press "Connect".



After pressing connect, please follow the prompts below.

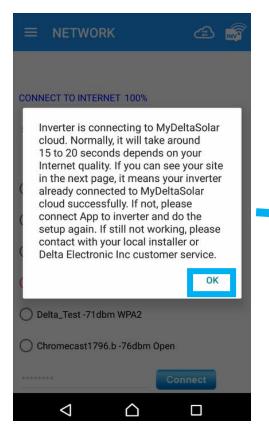

Press ok and Disconnect your phone from the inverter Wi-Fi and Connect your mobile Wi-Fi back to the home internet and await the below message.
 When successful you can now login and monitor your inverter power production online.

If you have the optional extra CT clamp and cable for consumption monitoring please see our website on how to turn on the internal meter: <u>http://support.delta-</u> <u>es.com.au/knowledgebase/h5a_222-internal-</u> <u>meter/</u>

Please also see our H5A_222 FAQ: http://support.deltaes.com.au/knowledgebase/delta-h5a_222-faq/

Don't hesitate to call our support line on 03 8546 3080 for any further questions.

Page | 8 V3.2 (pre-existing account)

