


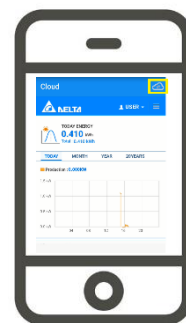

MY DELTA SOLAR APP

Delta Electronics Australia - How to share a plant to another account on the MyDeltaSolar Cloud



Author: Geordie Zaphiris
Geordie.zaphiris@deltaww.com



Contents

Document History	2
How to share a plant on the MyDeltaSolar Cloud to another account	3


Document History

Revision	Note	Written	Checked	Date
A1.0		GZ		20/08/2019

APP	Inverter	DSP	COM	Date
1.29a	H5A_222	2.00	2.04	12/06/2020

How to share a plant on the MyDeltaSolar Cloud to another account

1. Go to the IOS or Google Play store to download the “My Delta Solar” App or visit the MyDeltaSolar website.

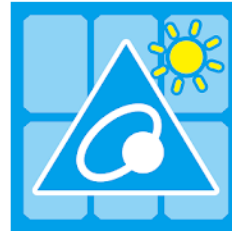

MyDeltaSolar

DELTA_App.tn Tools

3+

2. Please ensure that your phone/computer is connected to the internet in order to sign in.

Via MyDeltaSolar APP:

Swipe from the top of the screen down






Swipe from the top of the screen down again



Tap on mobile data to turn it on.

Or

Connect the phone to the home Wi-Fi

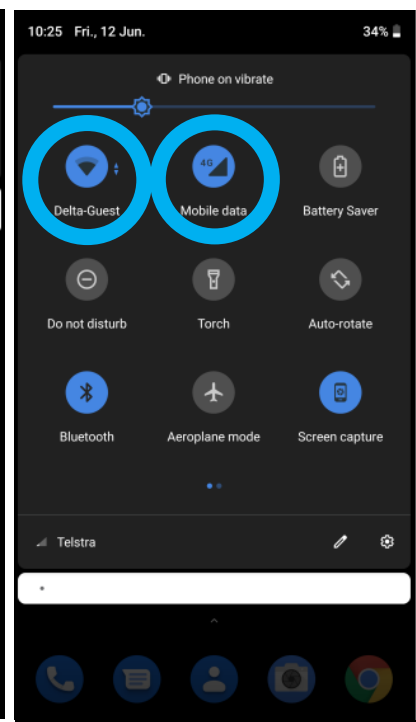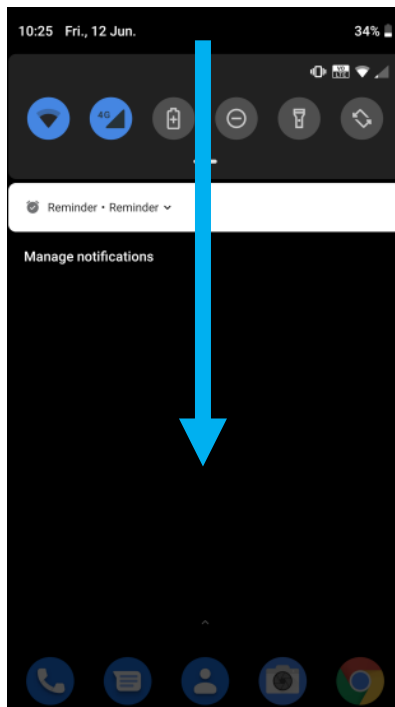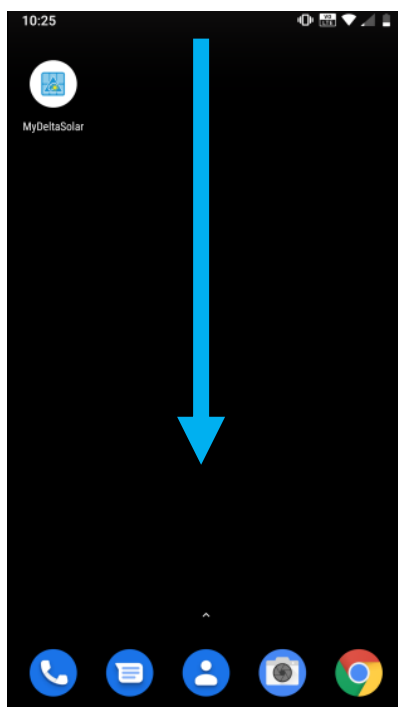


3. Launch the app and type in your details to Sign In.


3.1 Tap on the MyDeltaSolar APP



3.2 Fill in your email and password and Tap on "SIGN IN"

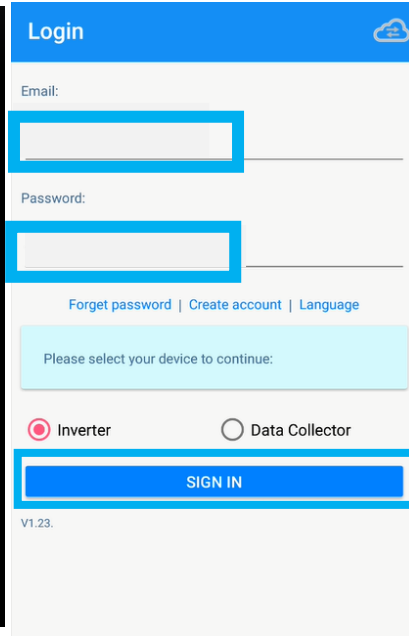

3.3 Tap the plant you wish to share

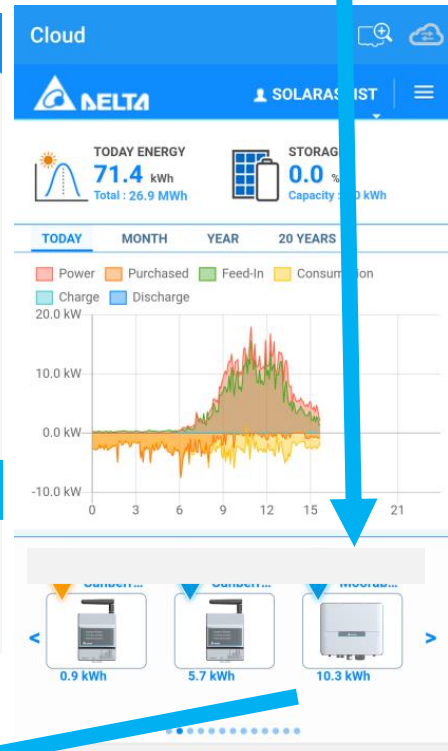

4. Tap on "Setting"



5. In order to share the plant you must click on the “+ ADD” button.

Please type in the email address of the account. Press send to then have the plant shared across.

Alarm Email notifications can be set by typing an email address in one of the 3 fields.

This can be done via the MyDeltaSolar website in exactly the same way.