


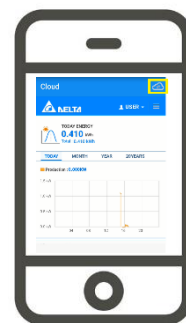

MY DELTA SOLAR APP

Delta Electronics Australia - How to reconnect your Inverter to the MyDeltaSolar Cloud



Author: Geordie Zaphiris
Geordie.zaphiris@deltaww.com



Contents

Document History	2
How to reconnect your Inverter to the MyDeltaSolar Cloud.....	3


Document History

Revision	Note	Written	Checked	Date
A1.0		GZ		20/08/2019

APP	Inverter	DSP	COM	Date
V1.29a	H5A_222	2.00	2.04	12/06/2020

How to reconnect your Inverter to the MyDeltaSolar Cloud

1. This can only be done via the APP, go to the IOS or Google Play store and download the “My Delta Solar” App.

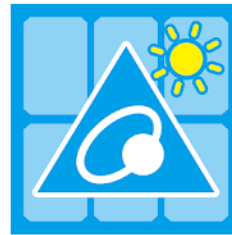

MyDeltaSolar

DELTA_App.tn Tools

3+

2. Please turn off your mobile data and connect your phone to the home Wi-Fi internet connection.




Swipe from the top of the screen down



Swipe from the top of the screen down again



Tap on mobile data to turn it on/off. (symbol is black and white when off)
Connect the phone to the home Wi-Fi

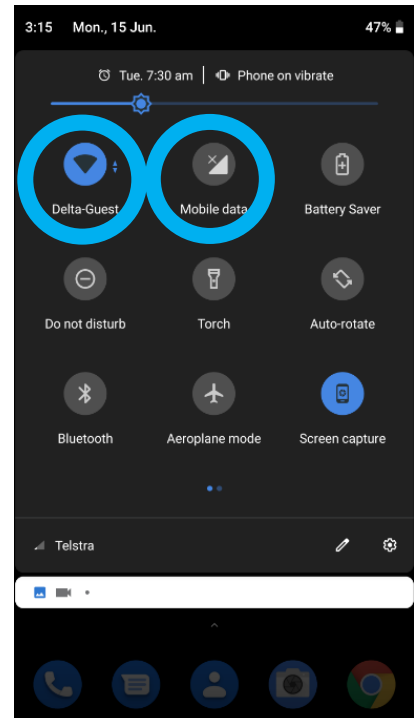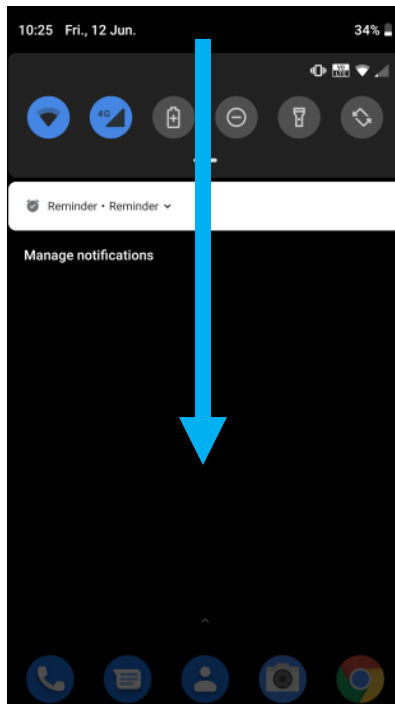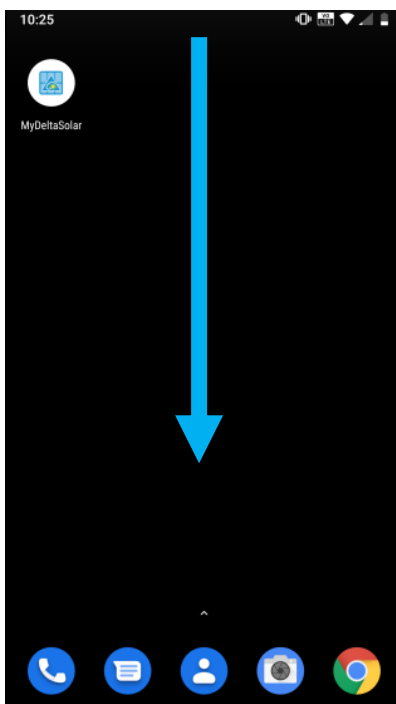



3. Launch the app and type in your details to Sign In.

3.1 Tap on the MyDeltaSolar APP



3.2 Fill in your email and password and Tap on "SIGN IN"



3.3 Tap the cloud button.



4. Press "OK" and your screen will swap to the Wi-Fi screen. Connect your mobile device to the Wi-Fi of the inverter using the password of the cloud account used to setup the device (this is the password used when logging in, you may need to call your installer for this).

Default password: DELTASOL


Then return to the App (use the return button at the bottom of the phone on Android devices)

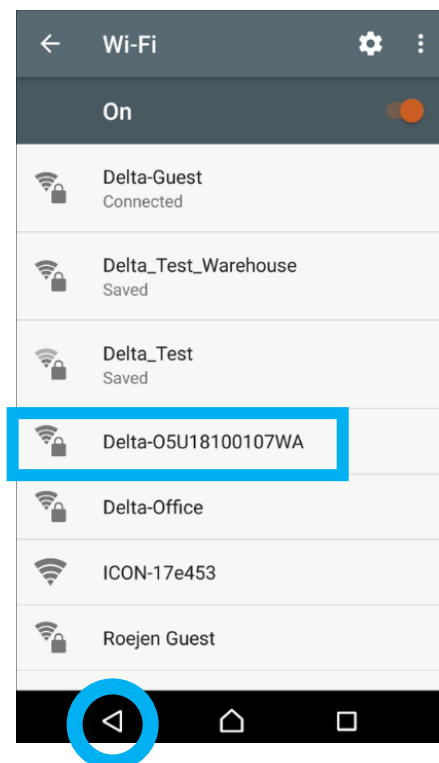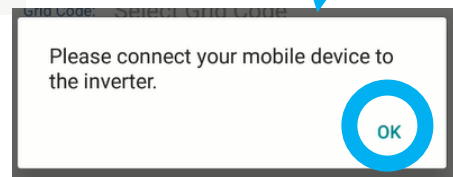


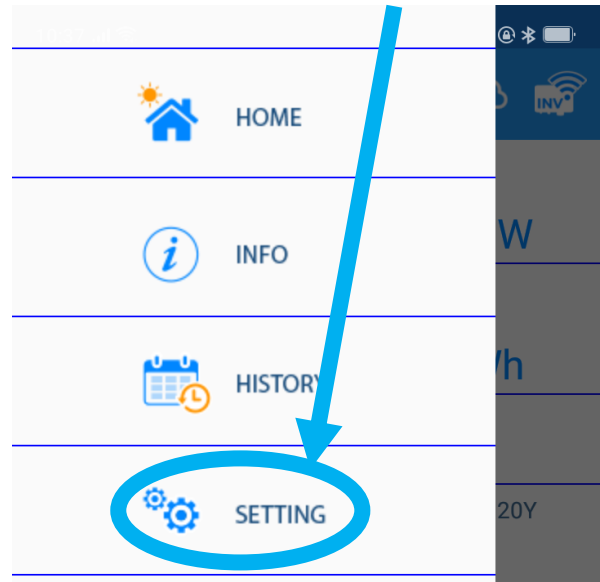



If the screen does not change to as below you may need to press the cloud button again.


5. Press the menu button 

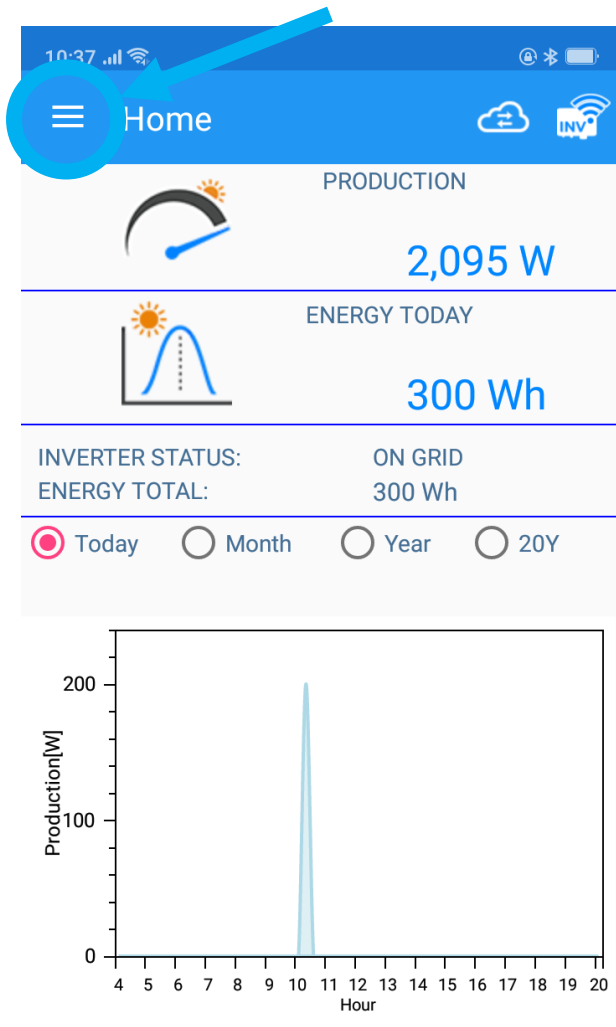



6. Press the Setting  button



7. Press the  button (please wait as it may take ~10 seconds to reach the next page)

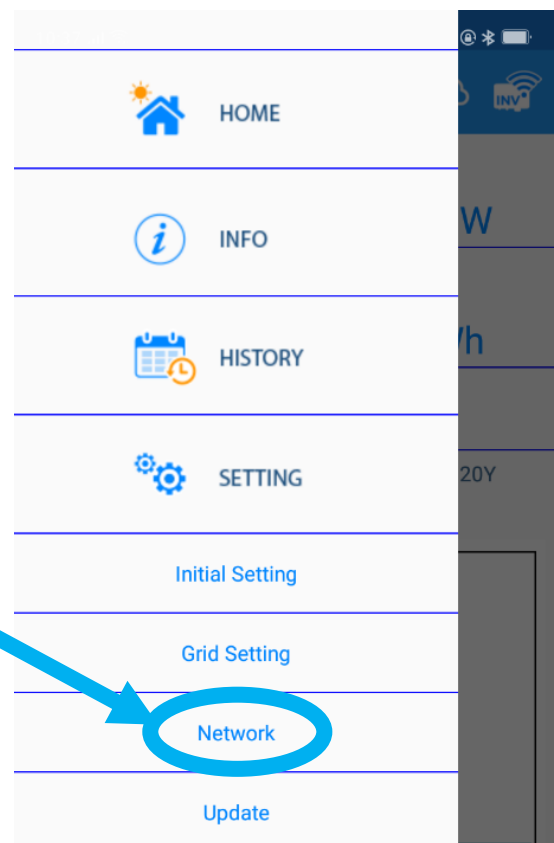

5. Press the “Scan” button and wait for the scan to complete.

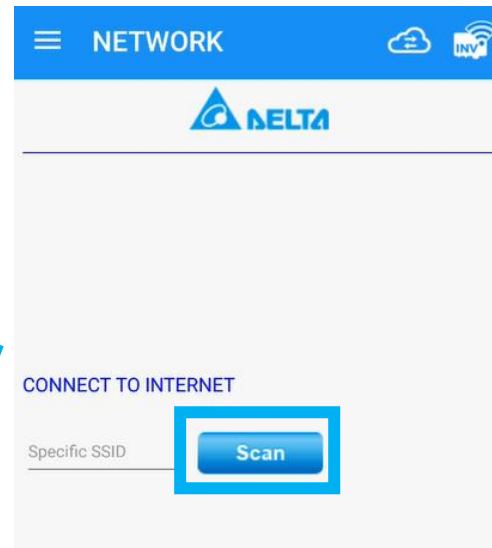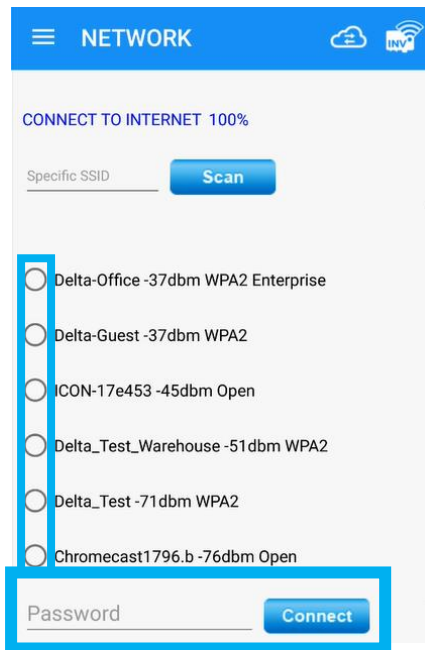

6. Select the Wi-Fi signal to connect your inverter to.

(-60dbm is a good signal and -70dbm is a weak signal, make sure you are connecting to a good signal)



If there are no suitable Wi-Fi connections, consider moving the router closer or using a Wi-Fi extender. Inverter information such as production can be viewed in point to point mode without internet.

If the Wi-Fi strength is too weak (weaker than ~-70dbm) the App will still attempt connection, the outcome will be displayed in a message popup box.


Select the Wi-Fi Connection and type in the Wi-Fi password then press “Connect”.



After pressing connect, please follow the prompts below.

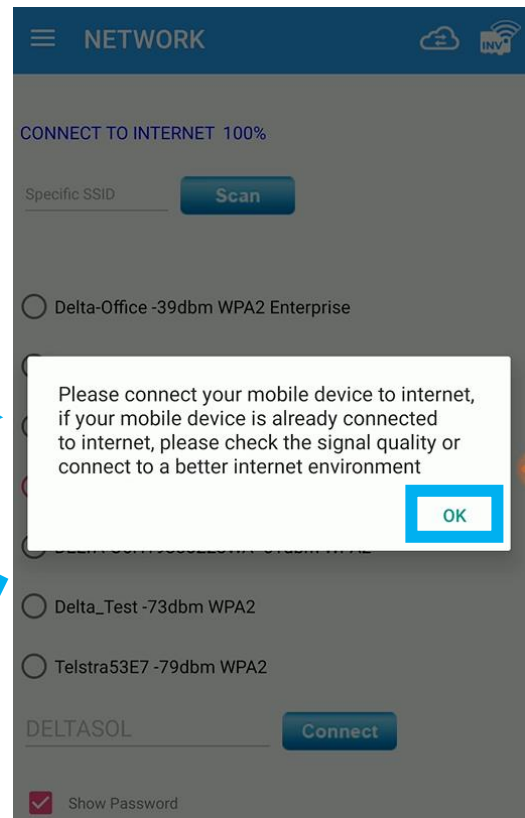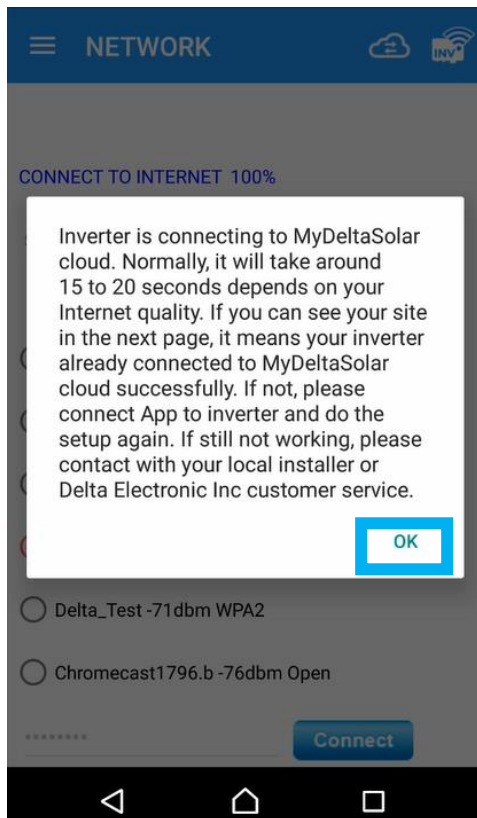

11. Press ok and Disconnect your phone from the inverter Wi-Fi and Connect your mobile Wi-Fi back to the home internet and await the below message. When successful you can now login and monitor your inverter power production online.

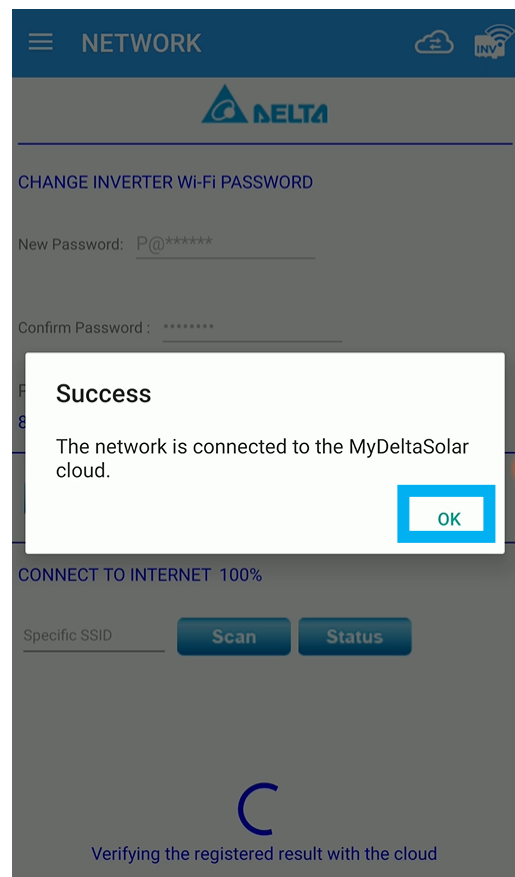

If you have the optional extra CT clamp and cable for consumption monitoring please see our website on how to turn on the internal meter:

http://support.delta-es.com.au/knowledgebase/h5a_222-internal-meter/

Please also see our H5A_222 FAQ:

http://support.delta-es.com.au/knowledgebase/delta-h5a_222-faq/

Don't hesitate to call our support line on 03 8546 3080 for any further questions.