



MY DELTA SOLAR APP

Delta Electronics Australia - How to update your inverter to the latest FW via the MyDeltaSolar APP



Author: Geordie Zaphiris
Geordie.zaphiris@deltaww.com



Contents

Document History	2
How to update your inverters FW via the MyDeltaSolar App	3


Document History

Revision	Note	Written	Checked	Date
A1.0		GZ		20/08/2019

APP	Inverter	DSP	COM	Date
V1.29a	H5A_222	2.00	2.04	12/06/2020

How to update your inverters FW via the MyDeltaSolar App

1. This can only be done via the APP, go to the IOS or Google Play store and download the “My Delta Solar” App.

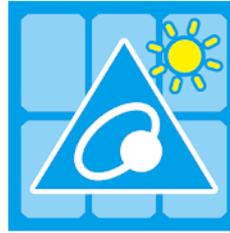

MyDeltaSolar

DELTA_App.tn Tools

3+

2. Please turn off your mobile data and connect your phone to the home Wi-Fi internet connection.




Swipe from the top of the screen down



Swipe from the top of the screen down again



Tap on mobile data to turn it on/off. (symbol is black and white when off)
Connect the phone to the home Wi-Fi

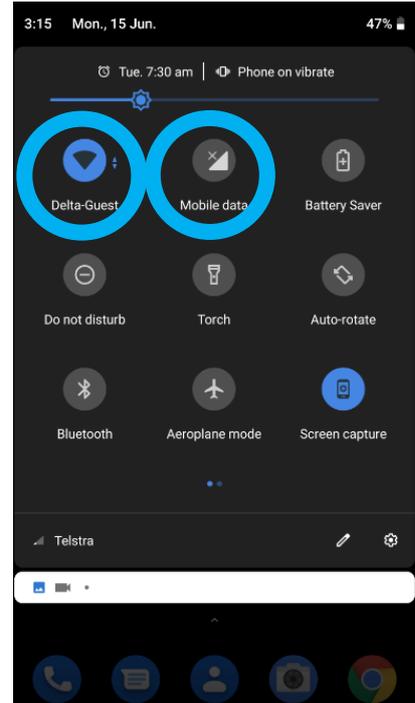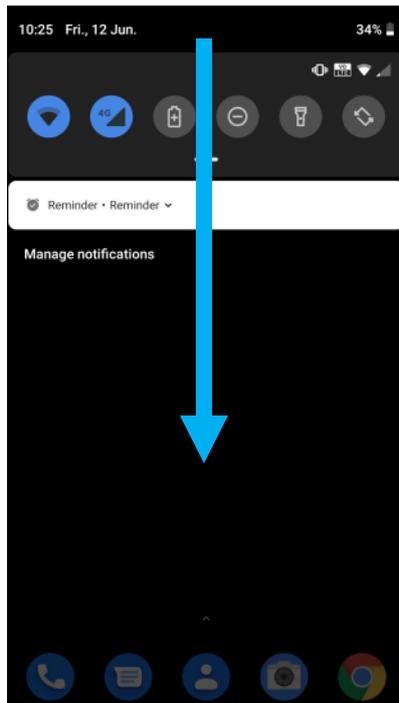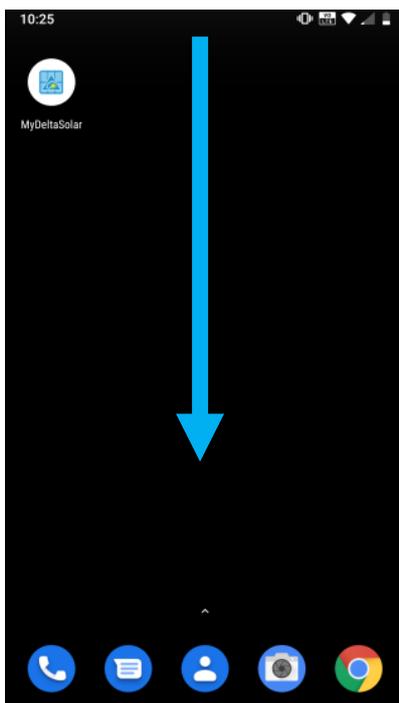




3. Launch the app and type in your details to Sign In.


3.1 Tap on the MyDeltaSolar APP



 3.2 Fill in your email and password and Tap on "SIGN IN"





3.3 Tap the cloud button.

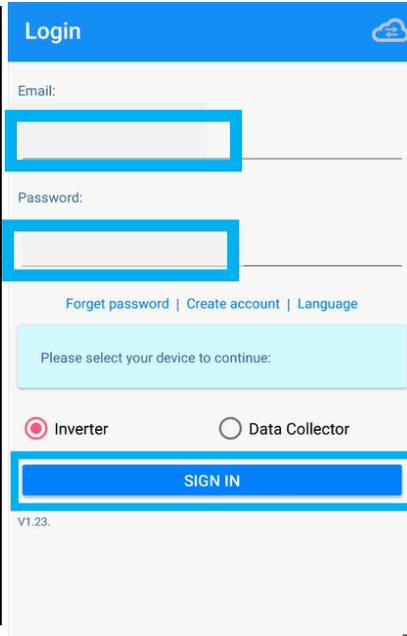

4. Press "OK" and your screen will swap to the Wi-Fi screen. Connect your mobile device to the Wi-Fi of the inverter using the password of the cloud account used to setup the device.

If not cloud connected yet the default password is: DELTASOL


Then return to the App (use the return button at the bottom of the phone on Android devices)

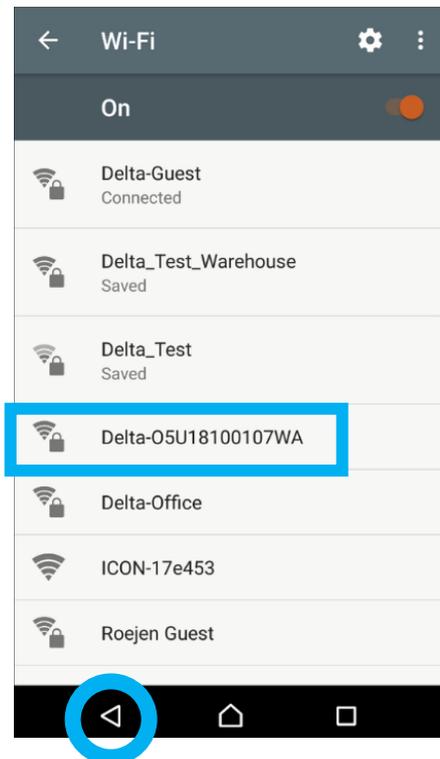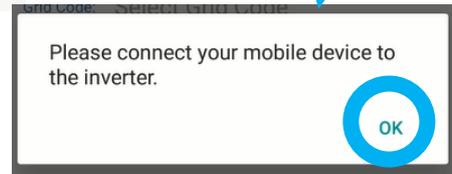



If the screen does not change to as below you may need to press the cloud button again.



5. Press the menu button 

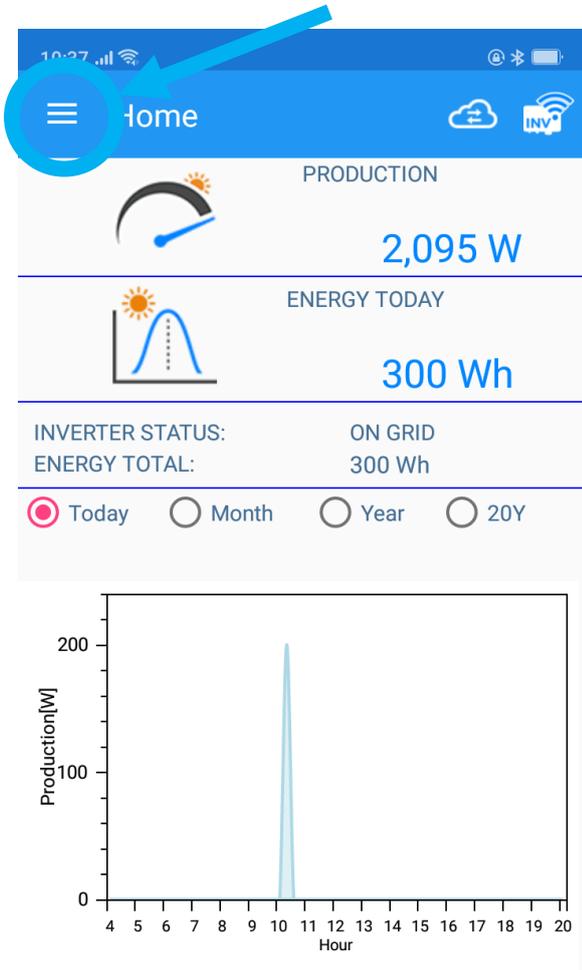

7. Swap your Wi-Fi to an internet connection.



Then press the "Update" button

6. Press the Setting  **SETTING** button (Tap on the "INFO" tab and scroll to the end to see what FW is currently on the inverter)

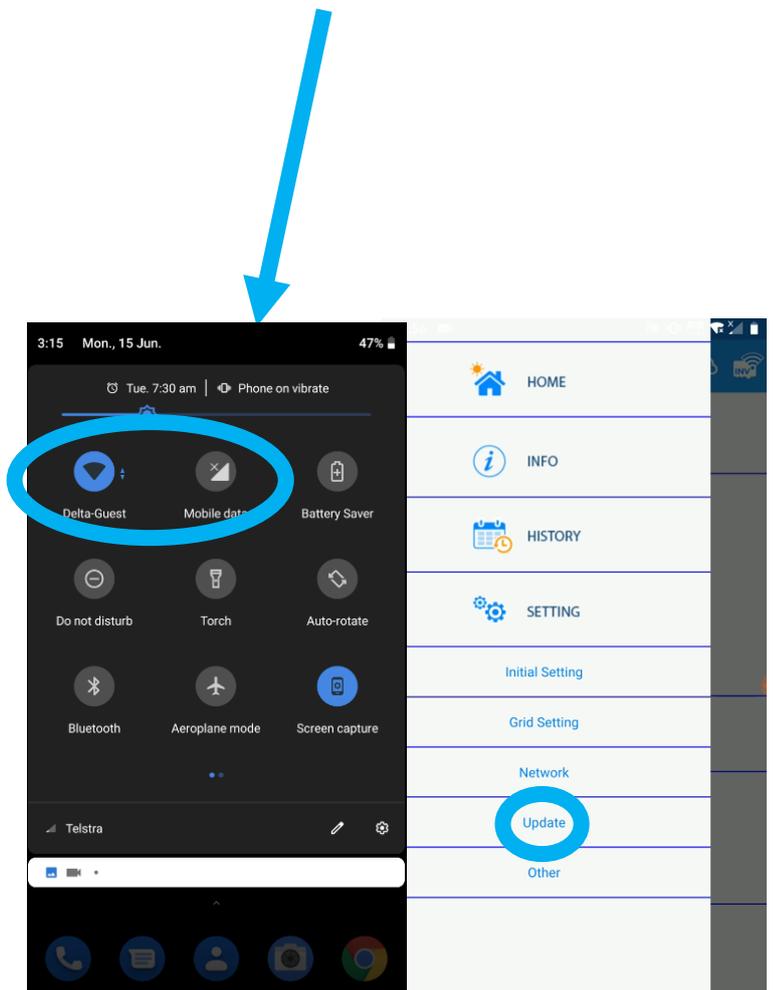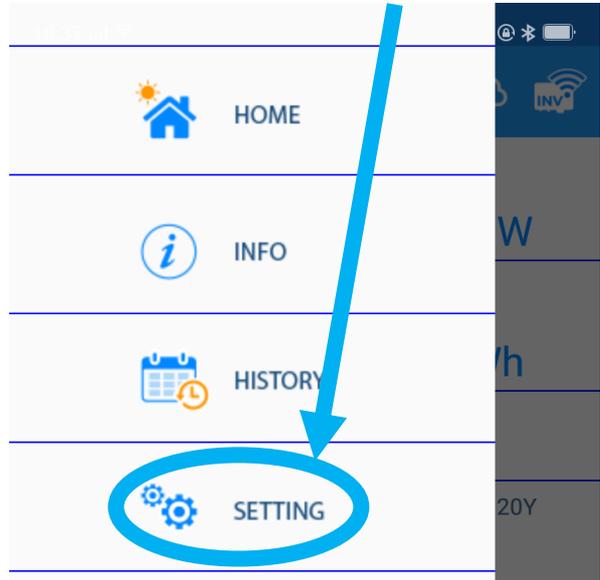




8. Password: 4613

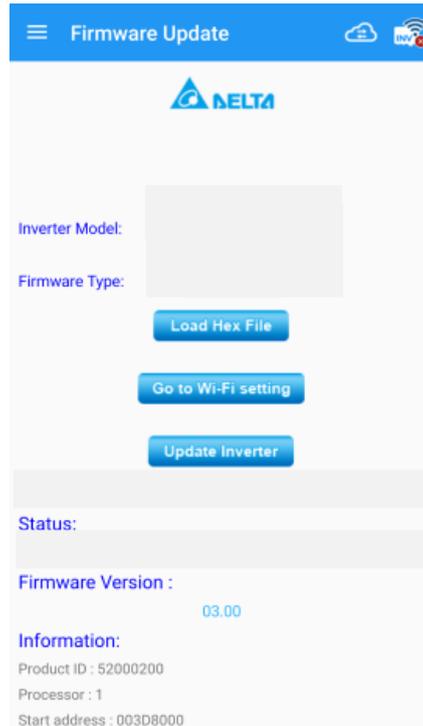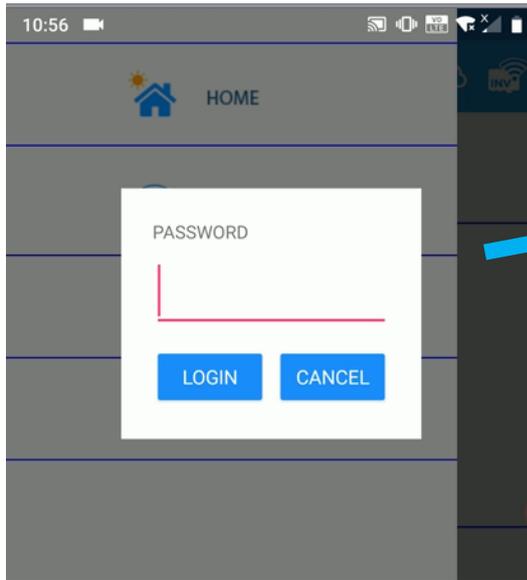


9. Select Inverter Model and Firmware type (Latest DSP or COMM)

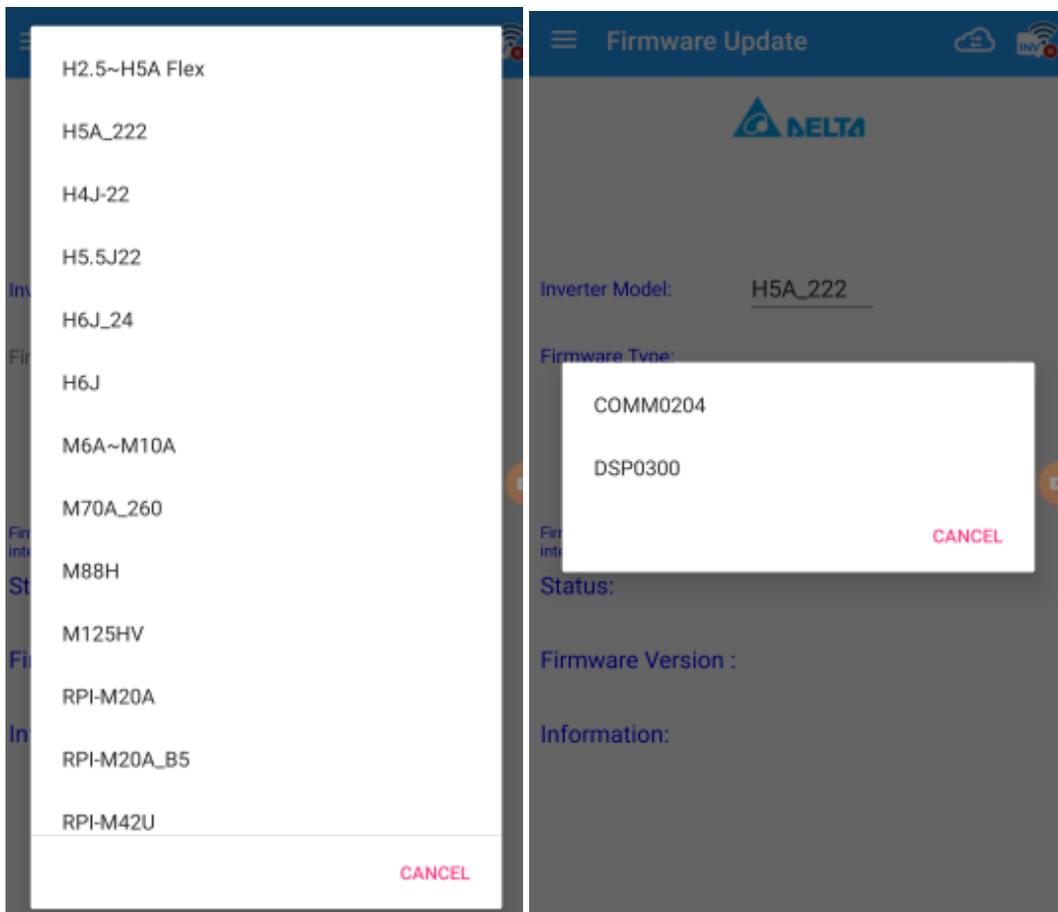

10. When Inverter Model and Firmware type has been selected tap “Load Hex File”

When loaded it will notify you by saying “Loading of HEX file finished. Ready to launch update”.

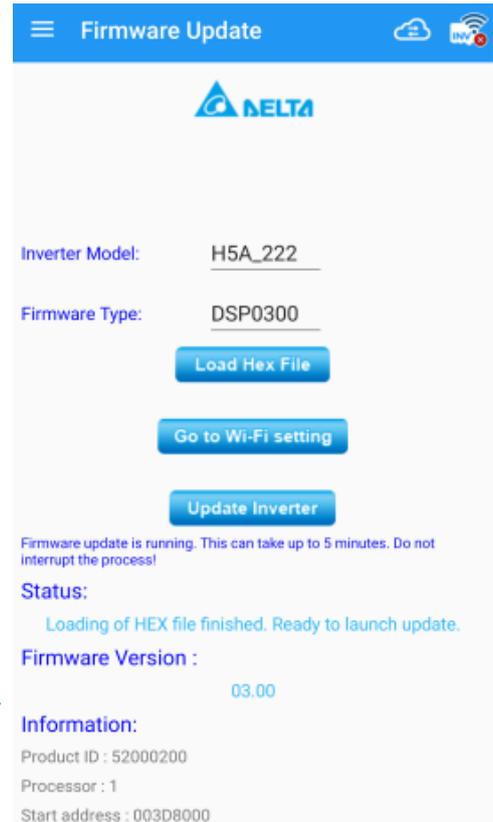

11. Press on the next button “Go to Wi-Fi setting” and connect your phone back to the inverter Wi-Fi. Then press Update Inverter.

Please wait until the update is complete.

(When completed you can check if the update went through by seeing the current FW on the inverter on step 6.)