

### Download & Sign up






**DeltaSolar**  
DELTA ELECTRONICS, INC.  
GET IT ON Google Play

#### NOTICE



- Before setting up, please login once in an internet-connected environment.
- For more APP setting detail, please scan the QR-code to get the operation manual.

1. Click "Create account".
2. Fill in your email address and password, click the check box and click "REGISTRATION".





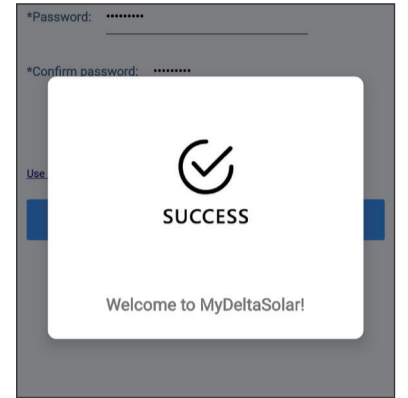
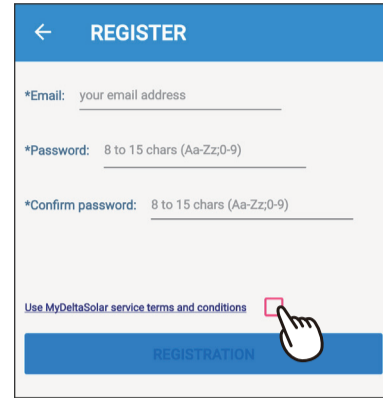
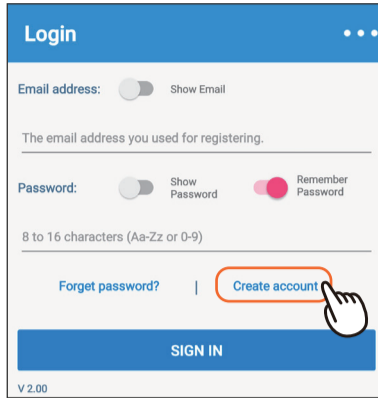


### Commission

To establish a successful communication between Inverter Wi-Fi to MyDeltaSolar Cloud, in the Wi-Fi connection setup page, the signal strength must be above **-70dBm** between each Wi-Fi device (Wi-Fi router, inverter, DC1...etc.). **In case the signal strength is below -70dbm, it may cause certain communication errors which may prevent a successful Wi-Fi communication.** To avoid such issues, Please adjust the Wi-Fi device position to improve the signal strength/quality.

1. Click "Create new plant/device"
2. Select the target device and click "SET"
- 3-Inv. Click "Auto" to assign the ID automatically, and click "SET"
- 3-DC1. Select the target inverters, click "Auto ID" to assign the ID automatically, and click "SET"
4. Select grid code and click "SET"






5. Click "NEXT"
6. Set a new password to the device and click "SET"
7. Click "Connect to the Cloud" to use MyDeltaSolar monitoring or click "Skip" to go to step ⑧

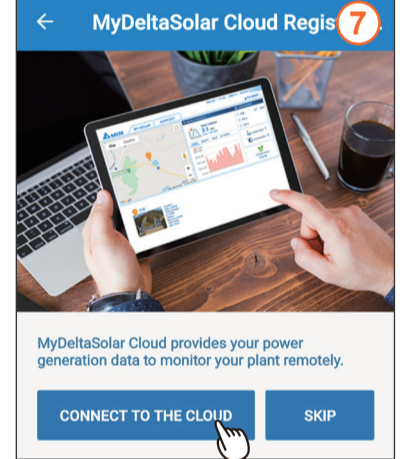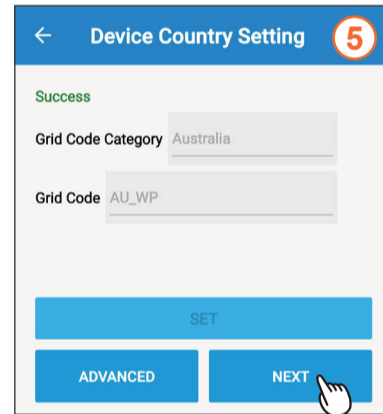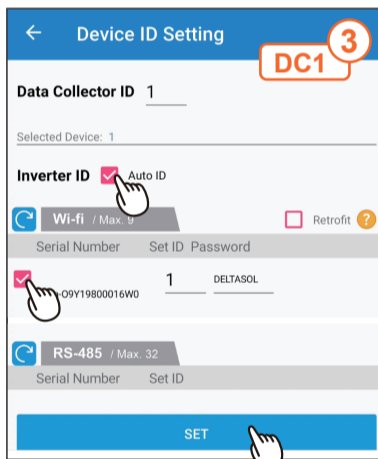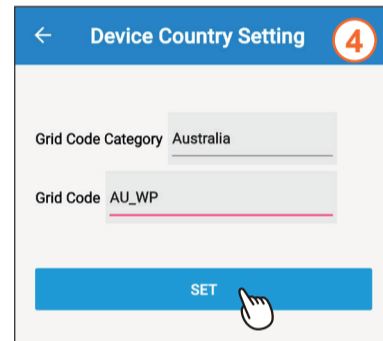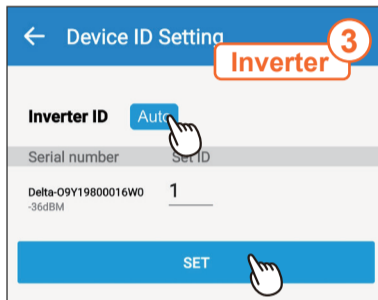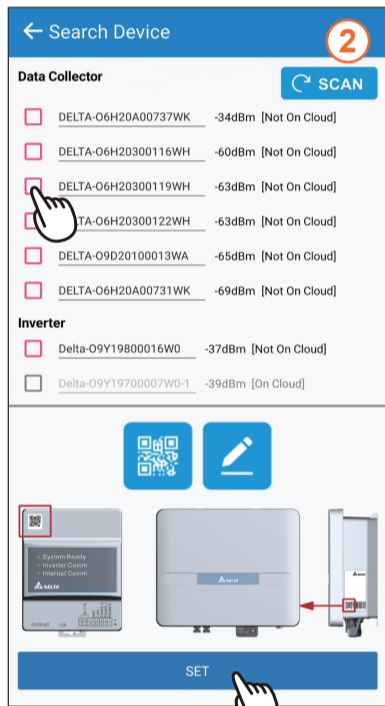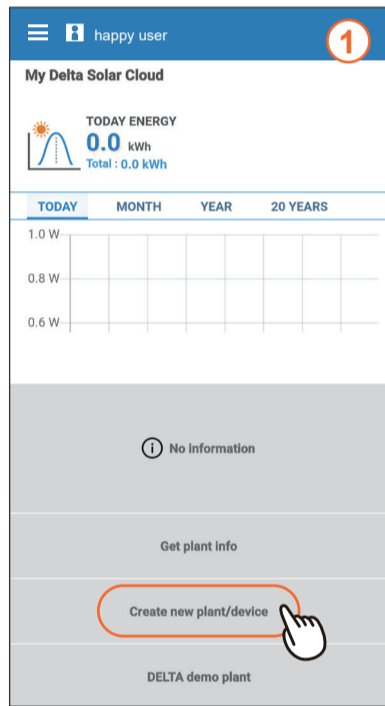

8. Select the network interface and click "SET".

9. Select the plant type and then assign a plant name. Click "Get Location" for the GPS position and click "SET".

10. Fill in the e-mail address to assign the owner to the plant. (For more detail, please refer to "More Info.")

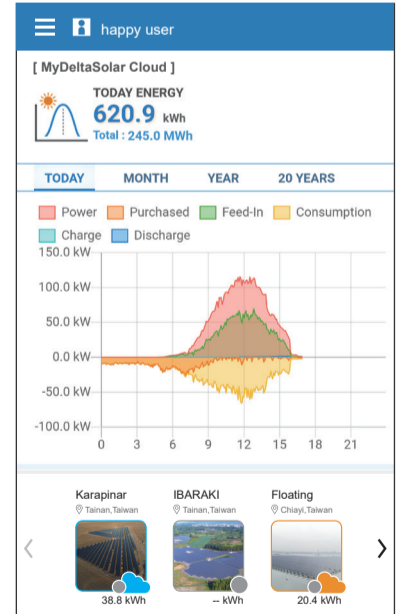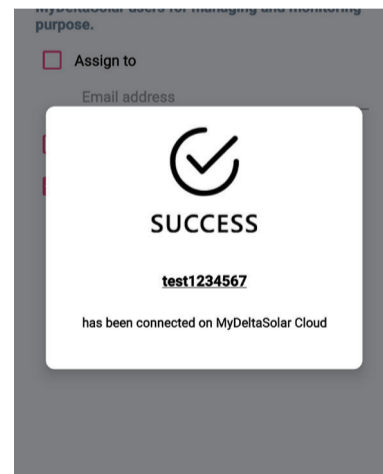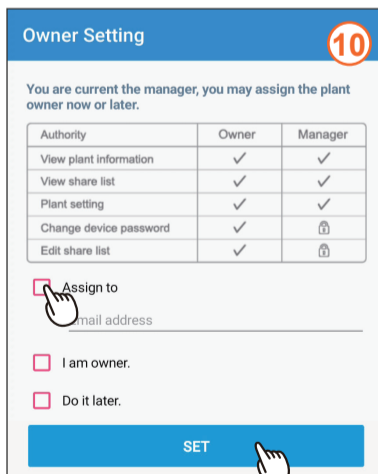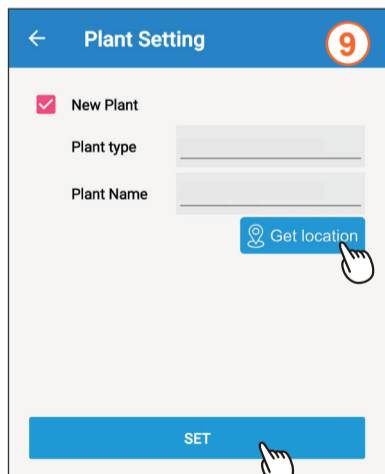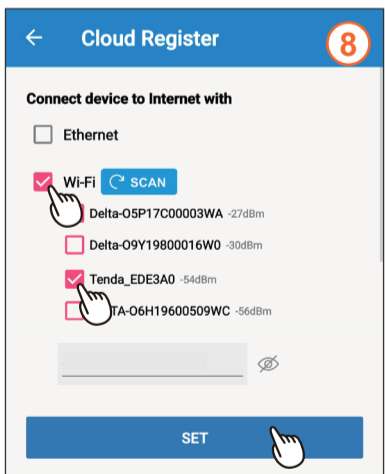

### More Info.

#### Function accessibility list

Authority / Function	Owner	Manager	Viewer
View plant information	✓	✓	✓
View share list	✓	✓	✓
Plant setting	✓	✓	🔒
Change device password	✓	🔒	🔒
Edit share list	✓	🔒	🔒

#### Definition of Status Icon



- #### On site connection
- no signal
  - not connected
  - monitoring

- #### Cloud connection
- no Internet
  - monitoring
  - fault
  - error/waring/disconnect