Disassembly terminal and SPD

D022_v1.0







Open front cover

Open front cover for wiring.

- a. Release two screws on top.
- Release the latches to open front cover.
- c. Put down front cover gently.

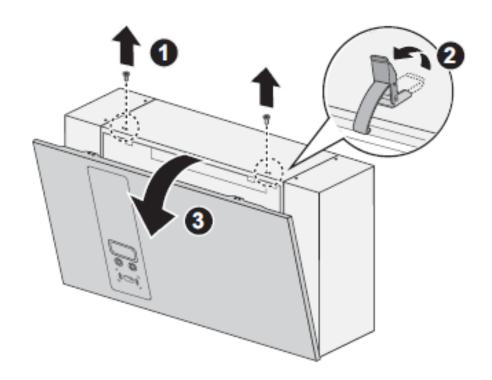



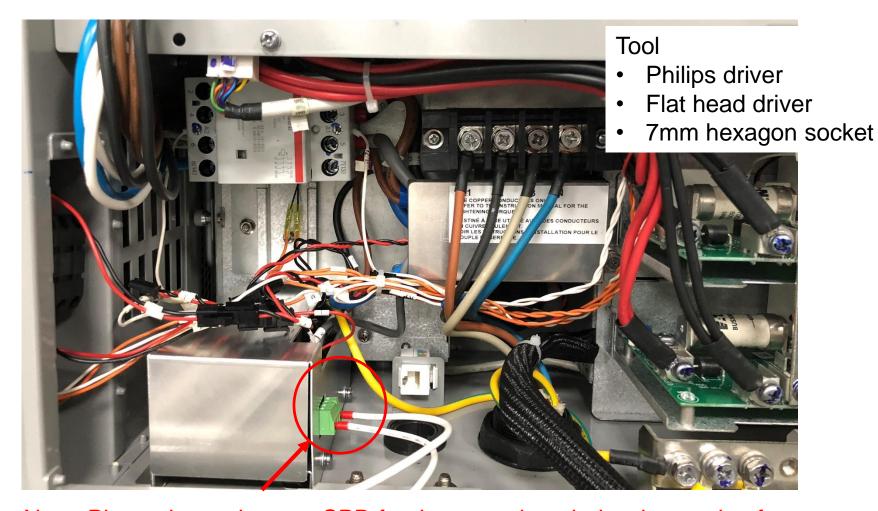


Note: Photo shows the new SPD for Japan region, below instruction focus on how to disassembly SPD and terminal.



Remove screws on terminal and connection to relay control board




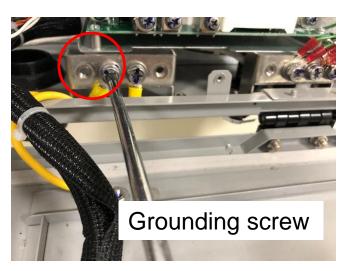






Remove terminal

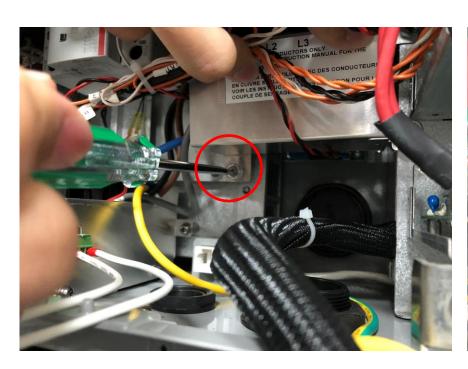




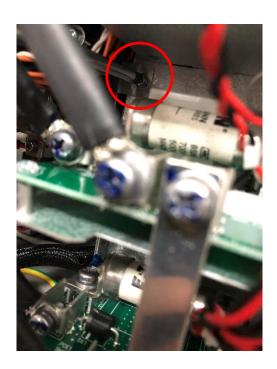




Remove contactor and cable

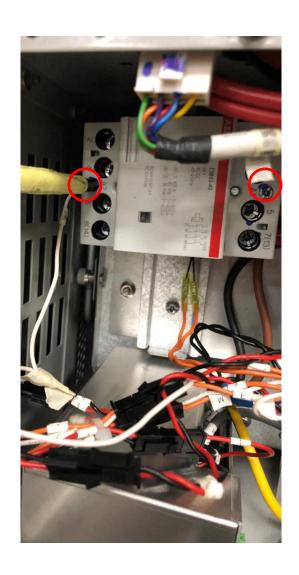





Black plug need to open

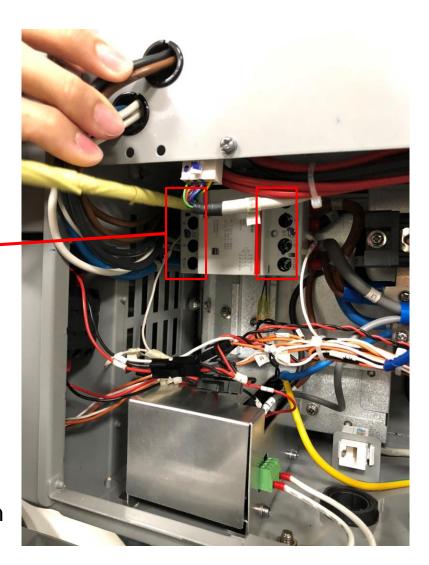




Remove SPD

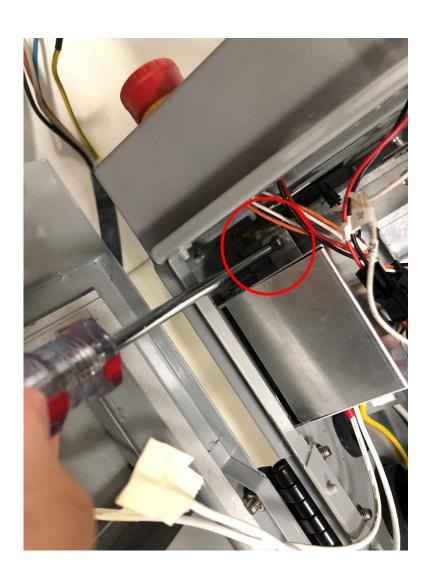


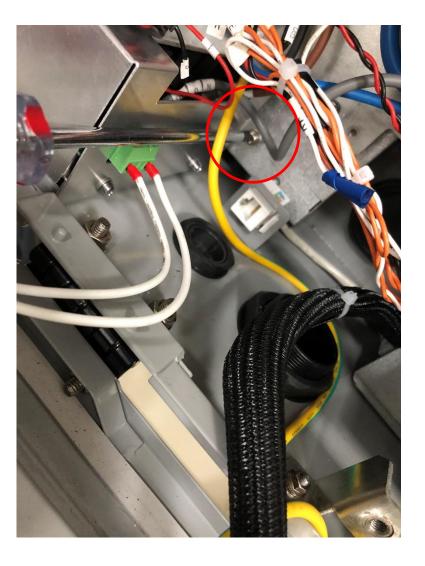




Release screws on back plate

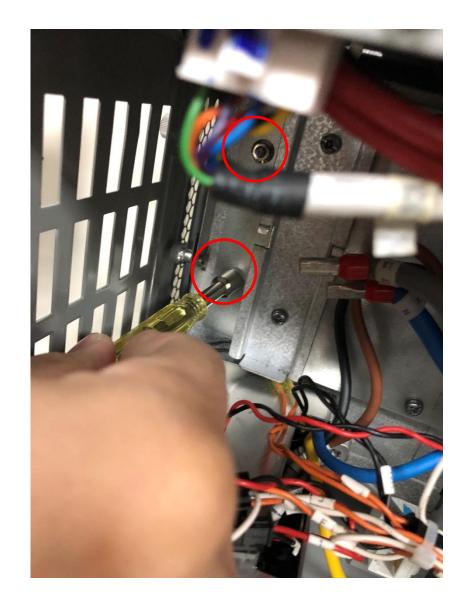

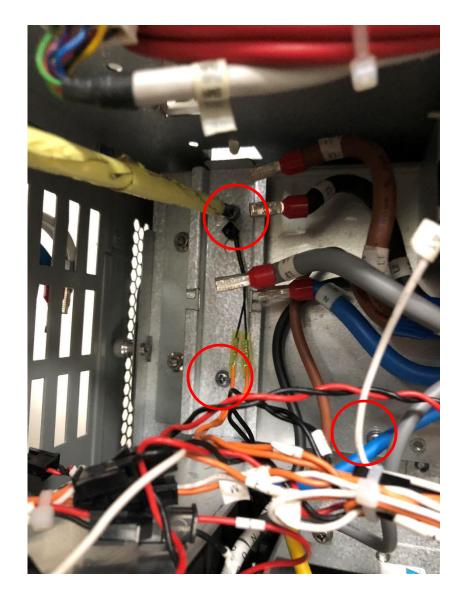




- Whole assembly is remove.
- Reverse the sequence after new assembly is finished.

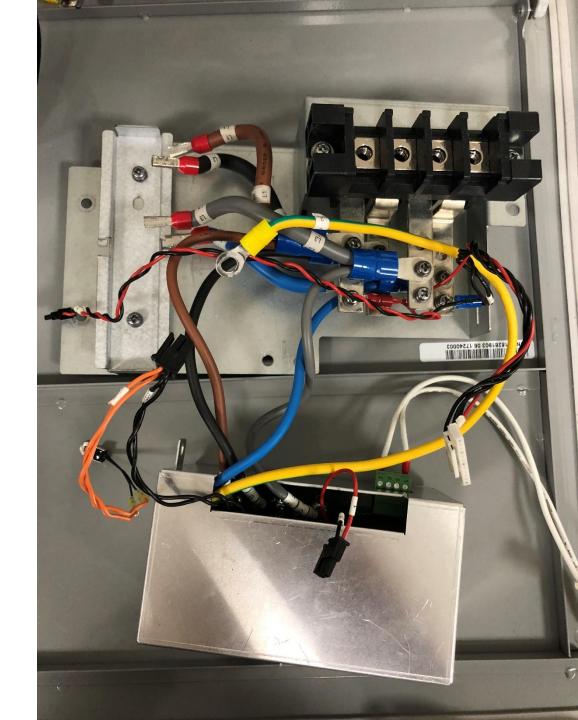



Release cables on SMR at left side cover

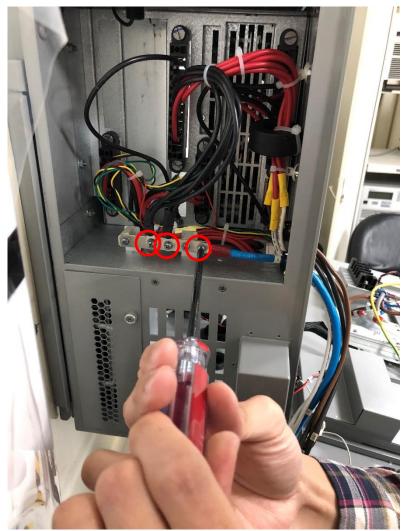

Whole SMR cable is remove.



Smarter. Greener. Together.

