

DC Wallbox Check SMR

May 4, 2020



D024_v1.0



Step 1. Remove the right side filter

Remove filter cover with T20 torx driver

- Release the two screws on top.
- Release the two screws on bottom and pull out the latch.
- Open and remove the filter cover.

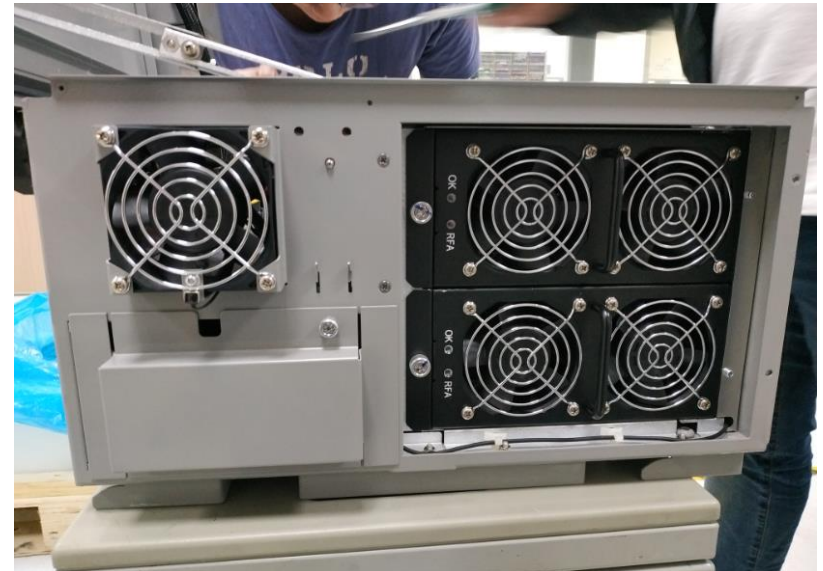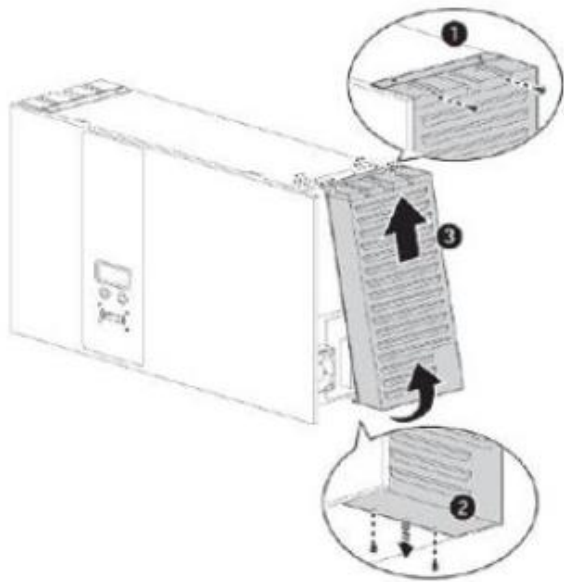

Step 2. Check the indicator of SMR

- Power on charger, under standby, no charging → indicator no light is normal
- When do charging, indicator = OK → SMR is OK
- When do charging, indicator = RFA → SMR is Failed

Note: DCWB still can do charging if one SMR is failed



Smarter. Greener. Together.

To learn more about Delta, please visit www.deltaww.com.

