

Replacing the CCS Charging Gun

DS09_v1.1





Relevance part number

- 3799992800-S
- 3799992900-S
- 3799993000-S
- 3798100708-S




WARNING!

To avoid danger of electrical shock or injury, turn off power at the panel board or load center before working on the equipment or removing any component. Do not remove circuit protective devices or any other component until the power is turned off.

Disconnect electrical power to the DC Wallbox before any maintenance work to ensure that it is separated from the supply of AC mains. Failure to do so may cause physical injury or damage to the electrical system and charging unit.


Replacing the CCS Charging Gun

Step 1:

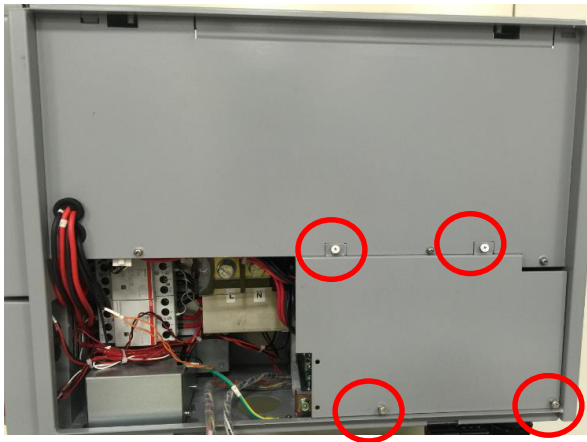


- Open front door and loosen four screws

Step 2:

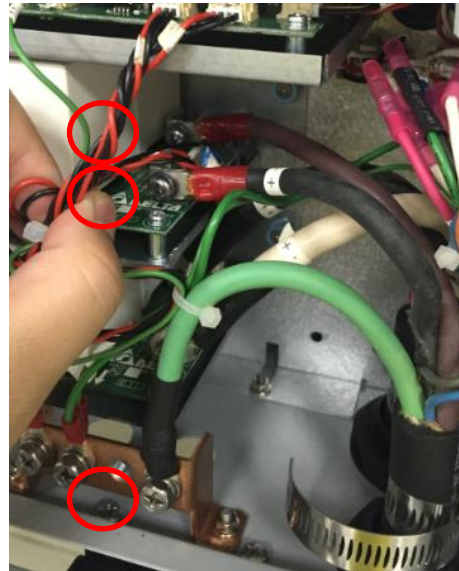

- Loosen three screws shown in the photo

Step 3:

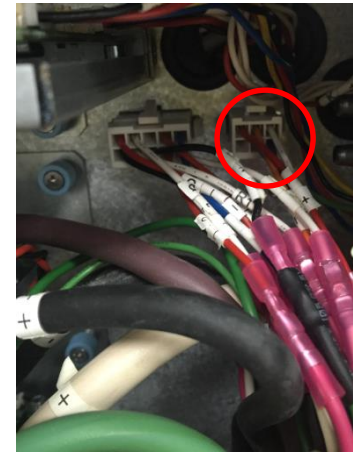

- Unplug the connector

Replacing the CCS Charging Gun

Step 4:



- Loosen the cable and remove the charging gun
- Replace the charging gun and reverse the sequence

Smarter. Greener. Together.

To learn more about Delta, please visit www.deltaww.com.

