

Replace CHAdeMO charging Gun

DS10_v1.0





Relevance part number

- 3799993100-S
- 3799993200-S
- 3799993300-S




WARNING!

To avoid danger of electrical shock or injury, turn off power at the panel board or load center before working on the equipment or removing any component. Do not remove circuit protective devices or any other component until the power is turned off.

Disconnect electrical power to the DC Wallbox before any maintenance work to ensure that it is separated from the supply of AC mains. Failure to do so may cause physical injury or damage to the electrical system and charging unit.


Replace the CHAdeMO charging gun

Step1:

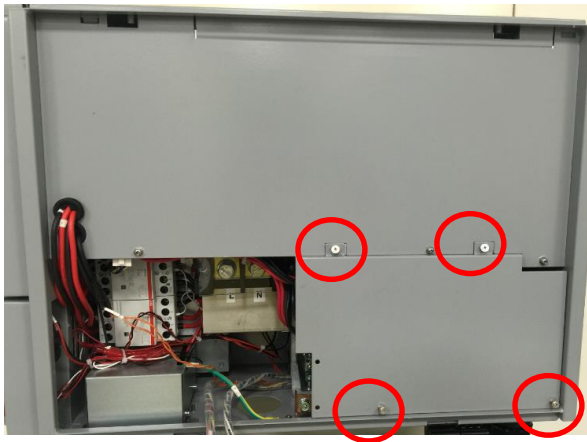


➤ Open front door and loose four screws

Step2:

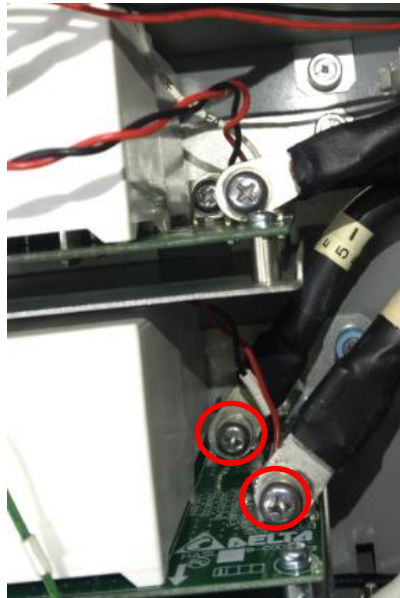

➤ Take off the two screws

Step3:

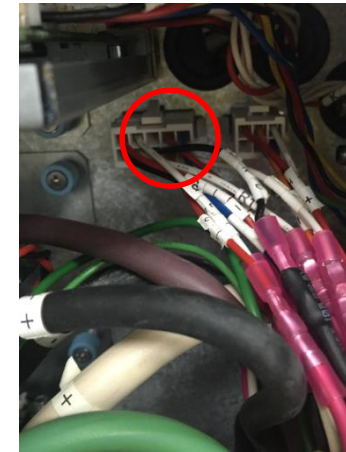

➤ Take off the connector

Replace the CHAdeMO charging gun

Step 4



- Loose the cable grand and take off the charging gun
- Replace the charging gun and reverse the sequence

Smarter. Greener. Together.

To learn more about Delta, please visit www.deltaww.com.

