

DC Wallbox


Replace RFID module

May. 5, 2020

DS17_v1.0





- RFID module: Delta P/N **3798C000000030-S**, including RFID antenna and reader
- Specific tool: 5.5mm inner hexagon spanner

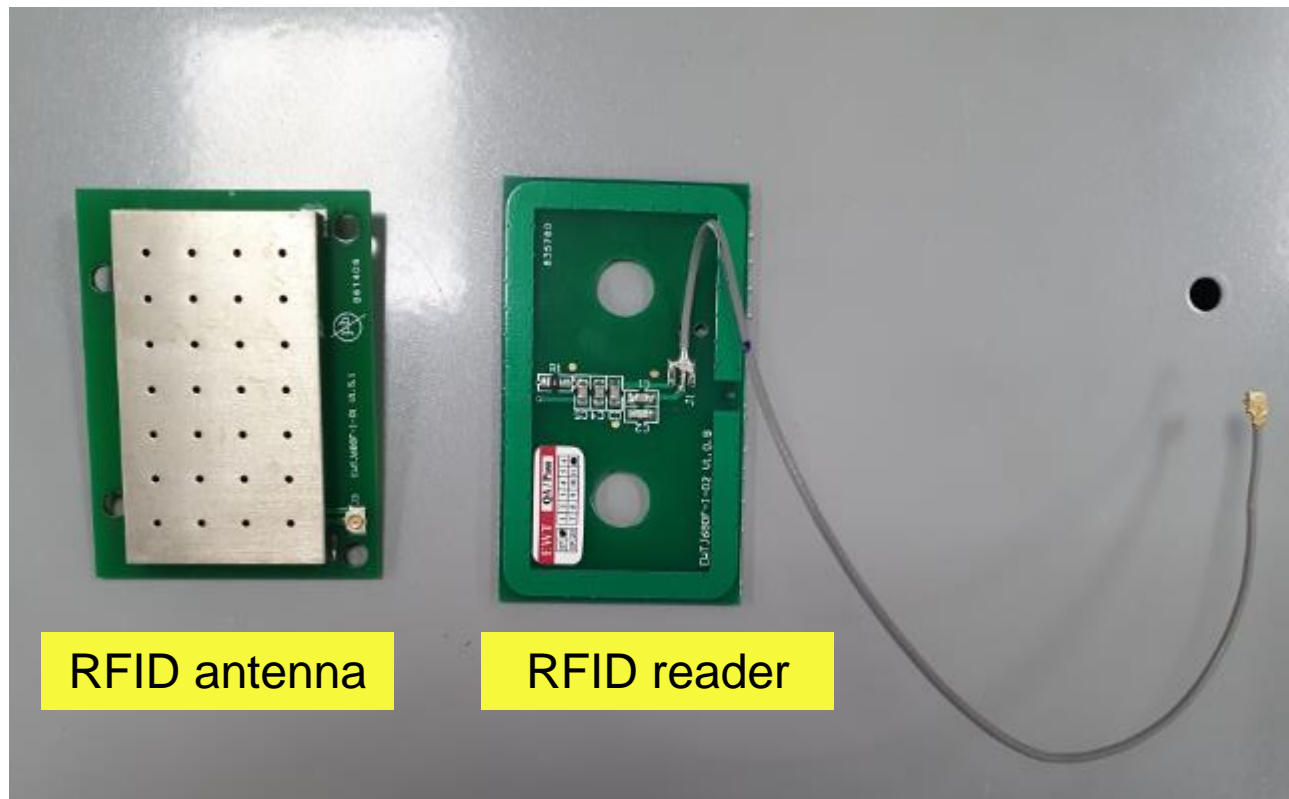



Step 1. Remove the screws*4pcs on the cover

Step 2. Remove the cover

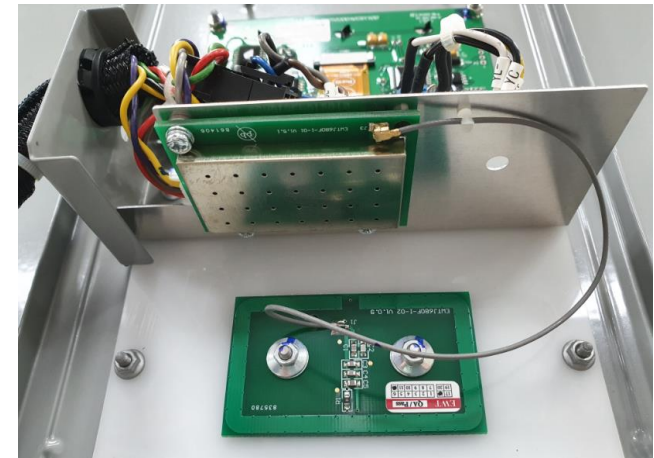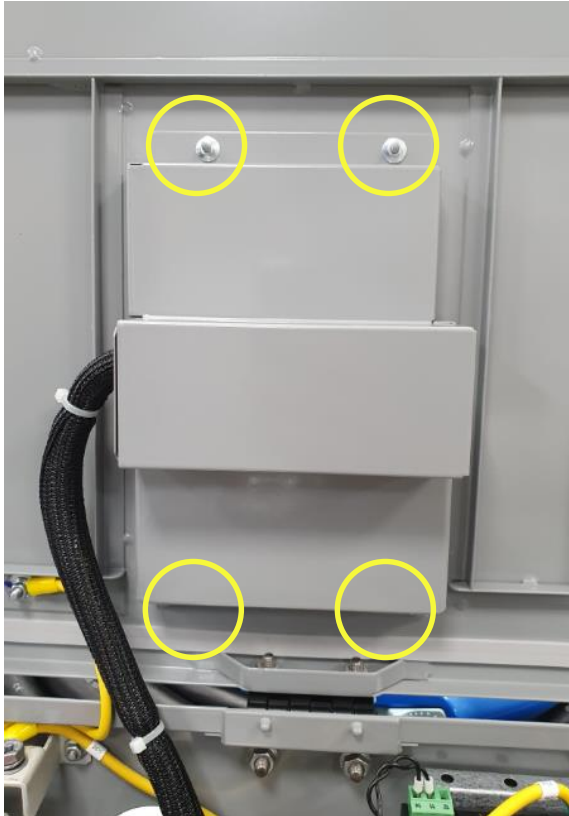

Step 3. Remove the connector

Step 4. Remove the screws*2pcs on the carrier and remove the screws*2pcs on the RFID reader

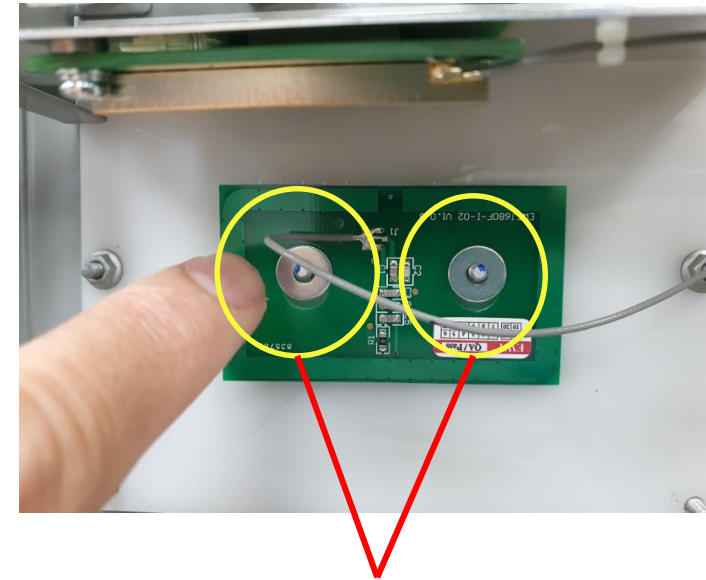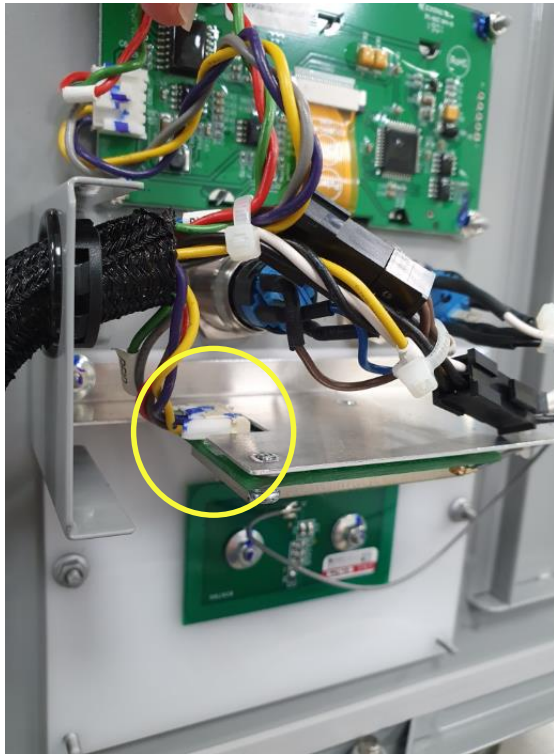



Be noted that there are two nuts, and be careful not to drop the nuts into the machine

Replace Steps

Step 5. Remove the RFID module

Step 6. Remove the RFID reader from the RFID antenna

Step 7. Remove the RFID antenna from the carrier

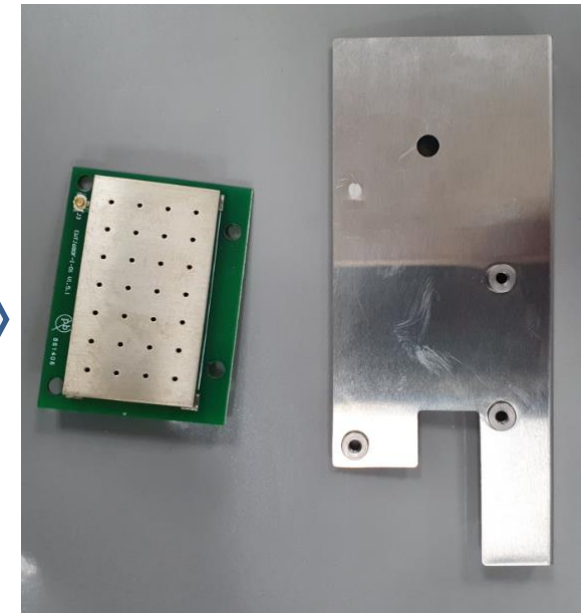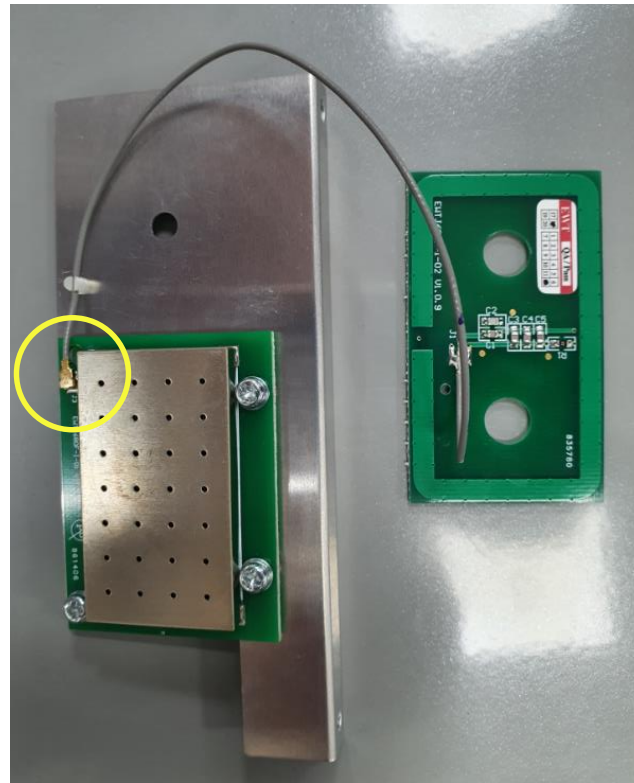

Step 8. Reverse the sequence to complete the replacement

8.1 Replace new RFID antenna


8.2 Install new RFID antenna on carrier

8.3 Replace new RFID reader and install the antenna cable on RFID antenna

8.4 Install whole RFID module on DCWB front door

8.5 Install the connector

8.6 Install the cover

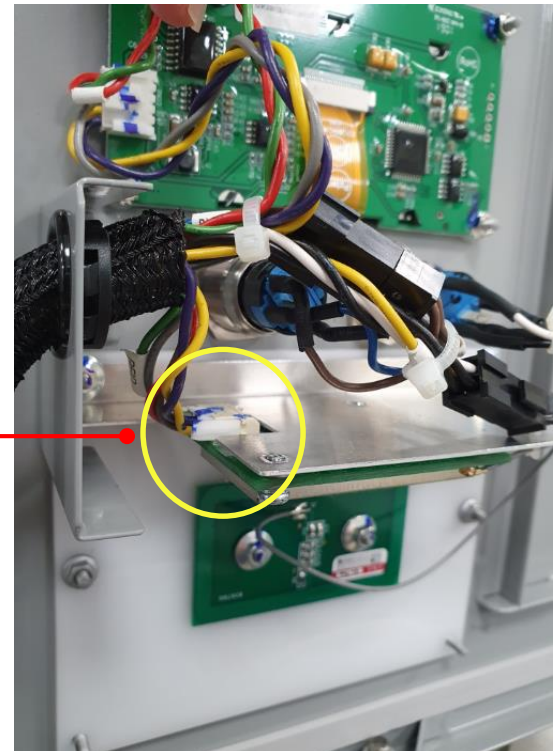

Smarter. Greener. Together.

To learn more about Delta, please visit www.deltaww.com.

