

DA06_ DCWB FW V2.03 Update Process Instruction

- FW version for each module

Module	FW version	Update time	FW file name
CHAdEMO CSU (BA board)	V02.03.12.xx	10 min	5062640812
CCS CSU (CA board)	V01.09.00.01	50~90 min	5062639503
Relay Ctrl Board	V01.03.02.00	10 min	5062586104
Aux Power Board	V00.04.05.00	10 min	5062572502

- Compatibility

- New BA FW (V02.03 or higher) with New CA FW (V01.09 or higher)
- Old BA FW (V01.3x or lower) with Old CA FW (V01.06 or lower)
- New Relay Ctrl BD FW (V01.03 or higher) is compatible for all New and Old BA CA; but Old Relay Ctrl BD FW (V01.03.00.00 or lower) is not supported to New BA CA.
- For Aux Power, there is no FW compatibility issue with other modules. But if Aux Power is not updated to FW v00.04.05.00, UVP problem may occurred.

BA fw		CA fw		Relay fw		Result
New	Old	New	Old	New	Old	
V		V		V		OK
V			V	V		NG ¹
	V	V		V		NG ¹
	V		V	V		OK
V		V			V	NG ²
V			V		V	NG ¹
	V	V			V	NG ¹
	V		V		V	OK

Note:

¹ Cannot do CCS charging, CHAdEMO charging is available

² Without the function of relay control board

- The sequence/condition of FW update

- Upgrade

- ◆ No sequence requirement for BA, CA, Relay Ctrl BD , Aux Power BD update
 - ◆ All can be updated via USB or OTA
 - ◆ Can update 1 by 1 or all together

- Downgrade
 - ◆ Sequence: Relay Ctrl BD→BA, CA, Aux Power BD
 - ◆ Condition: Relay Ctrl BD downgrade need to base on New BA fw. (Relay Ctrl BD will update failed without New BA fw)
 - ◆ No sequence and no condition requirement for BA, CA ,Aux Power downgrade

- How to update FW

- Via USB

- ◆ Method ①

Step 1. Put FW file (one or all) in USB stick root path


Step 2. Insert the USB stick into USB port (on the bottom of the DCWB unit or BA board). The update process will start automatically

Step 3. Remove USB stick after the update is completed

- ◆ Method ②

Step 1. Create a folder named **DCWB25kW**, and put all FW file in this folder

Step 2. Zip this folder to be **DCWB25kW.zip**

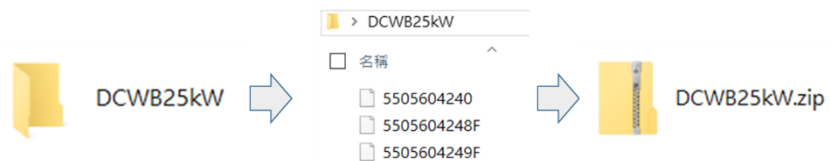

Step 3. Put **DCWB25kW.zip** in USB stick root path

Step 4. Insert the USB stick into USB port (on the bottom of the DCWB unit or BA board). The update process will start automatically

Step 5. Remove USB stick after the update is completed

- ◆ Put FW file (one or all) in USB stick

- Via OCPP Backend

- ◆ OTA update the FW file one by one, or update the **DCWB25kW.zip**

● ATTENTION !!

- Even though the CA fw update is successful, but the LCM shows “**update failed**”. To confirm the CA fw is updated successfully or not by checking it from Log file.
- When performing Aux Power BD **remote FW update** (both upgrade or downgrade), backend system **will NOT** receive the receive the “update successful” message, due to Aux Power BD is reset once FW update is finished. To confirm the CA fw is updated successfully or not by checking it from Log file.

● How to confirm the FW version

- Insert a USB stick to the charger, system log file will be downloaded automatically to the USB stick.



- Copy the log file to computer, and unzip it with password “SN@delta”.
Ex: JGD184700031WE@delta
- Open the file- DownloadConfiguration. The key information of FW version is indicated in the first 4 paragraph.

