

Download & Sign up



DeltaSolar
DELTA ELECTRONICS, INC.


GET IT ON
Google Play

NOTICE



- Before setting up, please login once in an internet-connected environment.
- For more APP setting detail, please scan the QR-code to get the operation manual.

- Click “Create account”.
- Fill in your email address and password, click the check box and click “REGISTRATION”.

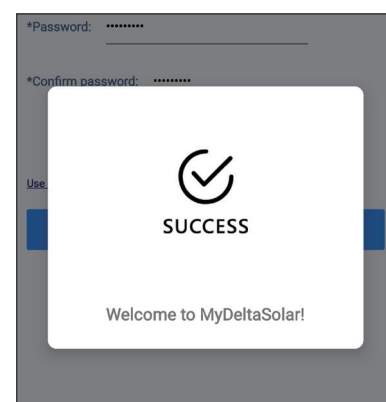

Commission

To establish a successful communication between Inverter Wi-Fi to MyDeltaSolar Cloud, in the Wi-Fi connection setup page, the signal strength must be above **-70dBm** between each Wi-Fi device (Wi-Fi router, inverter, DC1...etc.). **In case the signal strength is below -70dbm, it may cause certain communication errors which may prevent a successful Wi-Fi communication.** To avoid such issues, Please adjust the Wi-Fi device position to improve the signal strength/quality.


- Click “Create new plant/device”
- Select the target device and click “SET”
- Inv. Click “Auto” to assign the ID automatically, and click “SET”
- 3-DC1. Select the target inverters, click “Auto ID” to assign the ID automatically, and click “SET”.

- Click “NEXT”
- Set a new password to the device and click “SET”
- Click “Connect to the Cloud” to use MyDeltaSolar monitoring or click “Skip” to go to step ⑨

- Select the network interface and click “SET”.

- Select the plant type and then assign a plant name. Click “Get Location” for the GPS position and click “SET”.

- Fill in the e-mail address to assign the owner to the plant. (For more detail, please refer to “More Info.”)

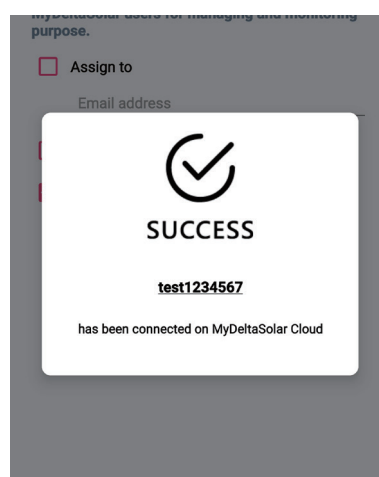

More Info.

Function accessibility list

Authority / Function	Owner	Manager	Viewer
View plant information	✓	✓	✓
View share list	✓	✓	✓
Plant setting	✓	✓	🔒
Change device password	✓	🔒	🔒
Edit share list	✓	🔒	🔒

Definition of Status Icon

On site connection	Cloud connection
no signal not connected monitoring	no Internet monitoring fault error/warning/disconnect

Download & Sign up




DeltaSolar
DELTA ELECTRONICS, INC.
Download on the App Store

NOTICE



- Before setting up, please login once in an internet-connected environment.
- For more APP setting detail, please scan the QR-code to get the operation manual.

- Click "Create account".
- Fill in your email address and password, click the check box and click "REGISTRATION".

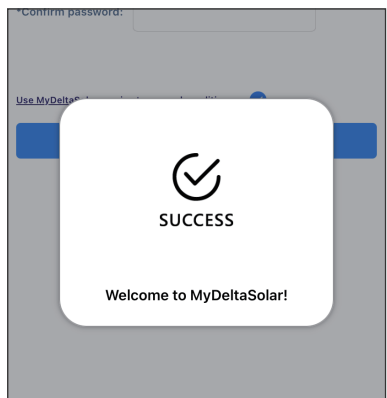

Commission

To establish a successful communication between Inverter Wi-Fi to MyDeltaSolar Cloud, in the Wi-Fi connection setup page, the signal strength must be above **-70dBm** between each Wi-Fi device (Wi-Fi router, inverter, DC1...etc.). **In case the signal strength is below -70dbm, it may cause certain communication errors which may prevent a successful Wi-Fi communication.** To avoid such issues, Please adjust the Wi-Fi device position to improve the signal strength/quality.

- Click "Create new plant/device"
- Please scan the QR code or enter the serial number of the device, and then click "SET".
- Inv. Click "Auto" to assign the ID automatically, and click "SET"
- 3-DC1. Select the target inverters, click "Auto ID" to assign the ID automatically, and click "SET".
- Click "NEXT"
- Set a new password to the device and click "SET"
- Click "Connect to the Cloud" to use MyDeltaSolar monitoring or click "Skip" to go to step ⑨

- Select the network interface and click "SET".

- Select the plant type and then assign a plant name. Click "Get Location" for the GPS position and click "SET".

- Fill in the e-mail address to assign the owner to the plant. (For more detail, please refer to "More Info.")

More Info.

Function accessibility list

Authority / Function	Owner	Manager	Viewer
View plant information	✓	✓	✓
View share list	✓	✓	✓
Plant setting	✓	✓	🔒
Change device password	✓	🔒	🔒
Edit share list	✓	🔒	🔒

Definition of Status Icon



On site connection
no signal
not connected
monitoring

Cloud connection
no Internet
monitoring
fault
error/waring/disconnect